

Barcode Scanning Made Easy



WLR8900 Scanner

Programming Guide

CCD LR Programming Guide



Please Read

Note: The Wasp® WLR8900 Series Scanners are ready to scan the most popular barcodes out of the box. **This manual should only be used to make changes in the configuration of the scanner for specific applications.** These scanners do not require software or drivers to operate. The scanner enters data as keyboard data. Please review this manual before scanning any of the programming barcodes in this manual.



Tech Tip

If you are unsure of the scanner configuration or have scanned the incorrect codes, please scan the default barcode on page 7. This will reset the scanner to its factory settings.

Check Version



© Copyright Wasp Barcode Technologies 2008

No part of this publication may be reproduced or transmitted in any form or by any means without the written permission of Wasp Barcode Technologies. The information contained in this document is subject to change without notice.

Wasp and the Wasp logo are registered trademarks of Wasp Barcode Technologies. All other trademarks or registered trademarks are the property of their respective owners.

Table of Contents


Chapter 1.	Introduction	1
Chapter 2.	Barcode Symbolologies	2
Chapter 3.	Installation	3
Chapter 4.	Quick Start	4
Chapter 5.	WLR8900/8905 Setup & Configuration . . .	5-28
	1. Factory Default & Keyboard Connection . . .	6
	2. Autosense Stand Mode	6
	3. Beep and Delay	7-8
	4. Upper/Lower Case	9
	5. Keyboard Language	10
	6. Preamble/Postamble Configuration	11
	7. Terminator/Code ID	12
	8. Enable/Disable Barcode Symbolologies .	13-14
	9. Barcode Symbology Settings	15-27
	Code 39	15
	Interleaved 2 of 5 and Code 93	16
	Code 128 and UCC/EAN 128	17
	MSI/Plessey	18
	Codabar	19
	UPC-A	20
	UPC-A Supplemental / UPC-A to EAN-13 .	21
	UPC-E	22
	UPC-E Supplemental	23
	EAN-8	24
	EAN-8 Supplemental	25
	EAN-13	26
	EAN-13 Supplemental	27
Appendix A	Barcode Test Symbols	28-30
Appendix B	ASCII Table	31-34
Appendix C	Codes for PC	35
Appendix D	Technical Specifications	36
	Product Support	37
	Warranty	37
	Frequently Asked Questions	38

Introduction

Barcoding is the most common Automated Data Collection (ADC) technology providing timely, error-free information that can be used to increase productivity, accuracy, and efficiency in the workplace. Virtually every type of industry is using bar codes to replace keyboard data entry. Studies have shown that a proficient data entry operator will make one error for every 300 characters that are manually entered. The error rate using barcodes is almost negligible and can be error-free using barcode symbologies with the check digit enabled.

The Wasp Charged Coupled Device (CCD) technology is a technique whereby a barcode is photographed, digitized, and electronically sampled by built-in photodetectors. The detectors process the measurement of every bar and space using the number of adjacent photodetectors which contrast a black mark and a white space. Wasp WLR8900 series scanners extremely rugged since they have no moving parts. Wasp WLR8900 series scanners are support PS/2 or USB keyboard interfaces and easily wedges between the computer and keyboard. Barcode data is passed directly into the keyboard buffer as if it had been typed in by hand by a data entry operator.

Of all the hand held barcode scanning devices on the market, the CCD reader is the easiest to use and most cost effective for the typical business user. The Wasp WLR8900 series scanners are extended distance scanners with a depth of reading of up to one foot depending on the mil size of the barcode. To activate the scanner, the user simply points the scanning aperture towards the barcode, pulls the trigger, and aims the red LED beam across the barcode.

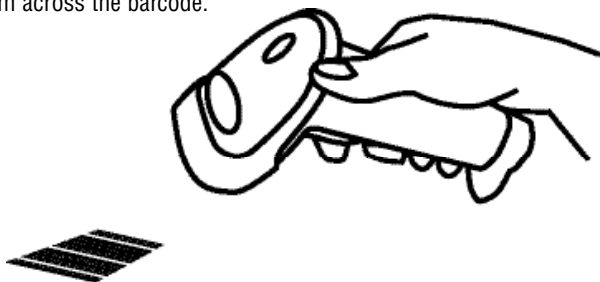

Barcode Symbolologies

Barcodes are symbols consisting of a series of bars and spaces which can be applied to packages, cartons, bottles, and other commercial products. The bars and spaces in each symbol are grouped in such a way to represent a specific ASCII character or function. The interpretation of these groups is based on a particular set of rules called symbolologies. Various symbolologies have been developed for particular applications. Some examples are shipping and receiving, manufacturing, retail, healthcare, transportation, document processing and tracking, and libraries.


The resolution of a barcode is dependent on the narrowest element of a barcode (X dimension), and can vary from high density (nominally less than 0.009 in./0.23 mm), medium density (between 0.009 in./0.23 mm and 0.020 in./0.50 mm), and low density (greater than 0.020 in./0.50 mm). Medium and low densities are the most common since these are the easiest to read (scan) with nearly all scanning devices. Wasp WLR8900/8905 Scanners can read barcodes with X-dimensions as low as 5 mils (0.005 in/0.13mm).

Wasp WLR8900/8905 Scanners can read the most popular barcode symbolologies including Code 39, Code 93, Code 128, Interleaved 2 of 5, UPC-A, UPC-E, EAN/JAN-8, EAN/JAN-13, Codabar, and MSI/Plessey.

Please see test chart on pages 29-31.


Installation

WLR8900 PS2 Scanner

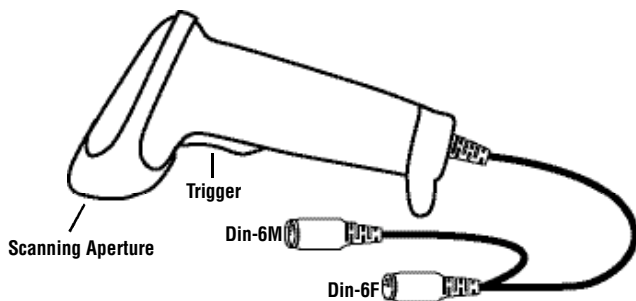

1. Turn off your computer.
2. Unplug your PC keyboard cable and plug the male end (Din 6) of the WLR8900 Scanner directly into your PC keyboard port. Plug your keyboard cable into the other end (female Din 6) of the the scanner.
3. Turn your computer on.

WLR8905 USB Scanner

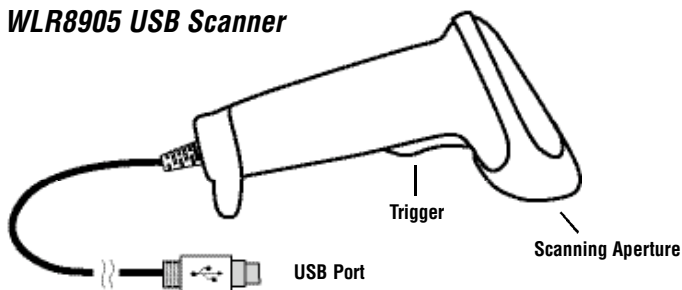

1. Plug the USB of the WLR8905 Scanner directly into your PC's USB port.


Quick Start

Your Wasp WLR8900/8905 Scanners are ready for use. The default settings of the scanners have been pre-programmed for the most common bar code configurations. Use the “WLR8900/8905 Setup & Configuration” sections only to customize the scanners settings. Please review the “Enable Barcode Symbolologies” configuration beginning on page 14 to see the list of barcode symbolologies which are enabled by default.


Tip:

- Use the pre-printed “Barcode Test Symbols” in Appendix A on pages 29-31 as a test chart to practice scanning.

PS2 Connection

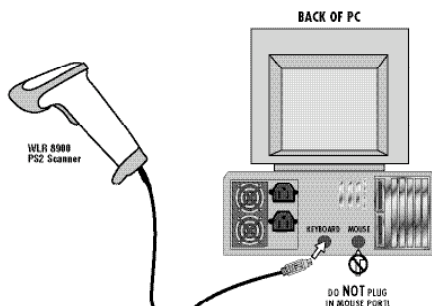

USB Connection

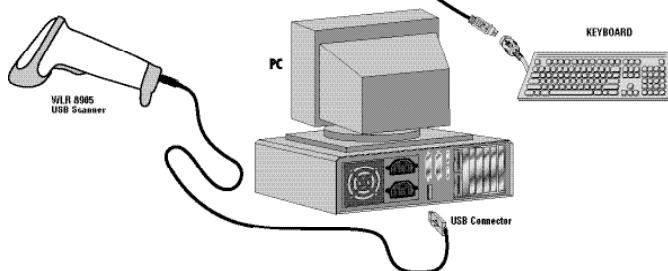

Setup & Configuration

In order to configure Wasp WLR8900/8905 Scanners, you must familiarize yourself with the setup procedures on the following pages. The default settings of the Wasp WLR8900/8905 Scanners are identified on each page and clearly marked using an asterisk (*). **The default settings have been preprogrammed for the most common barcode configurations. Use the Setup & Configuration only to customize the Wasp WLR8900/8905 Scanners settings.** If you need to configure the scanner, the default settings will be overwritten. All the programmed settings are stored permanently in non-volatile memory; therefore, your configuration will be maintained even if the keyboard power to Wasp WLR8900/8905 Scanners is removed by turning off your PC.

In order to configure Wasp WLR8900 Series Scanners, two basic steps need to be followed:

- (1) Locate the group that contains the options to be changed.
- (2) Scan the barcode representing the option to be changed.
The scanner will sound two beeps.

To change Minimum/Maximum Length:

- (1) Scan the Minimum or Maximum Length barcode.
- (2) Scan a 2 digit value from the ASCII table on pages 32-35
- (3) Scan the Minimum or Maximum Length barcode again.

Example: To have a minimum length barcode of 1, you must scan a 0 then 1, then scan the minimum barcode again. To have a maximum length barcode of 10, you must scan a 1 then 0, then scan the maximum barcode again.

Factory Default

Use the **Factory Default** barcode to reset the scanner to the Default settings.



FactoryDefault

Autosense Stand Mode

Scan this Autosense Stand Mode barcode to enable the hands-free autosense feature of the WLR8900/8905 Scanners. If you desire to turn this mode “off,” please scan the default barcode above.



**Autosense Flash Mode
Enable**

Keyboard Connection

The Keyboard Connection is used to program the Wasp WLR 8900/8905 Scanners for the type of computer it is attached.



PC (USB or PS/2) *



Notebook

*Default

The 'Beep and Delay' configuration supports the general control options for the Wasp WLR8900/8905 Scanners. These options include the volume, intercharacter delay, and interblock delay.

Interblock delay is the minimum time interval between two adjacent scans. If the processing speed of your host device is slower than your scanning speed, a longer interblock delay may ensure the data integrity.

Intercharacter delay is the time period that the scanner will wait before transmitting the next character. If data sent by the scanner has incorrect or missing characters, a longer intercharacter delay may solve the problem. The intercharacter delay should be changed only if the transfer rate cannot be maintained between the scanner and the keyboard buffer of the computer.

Note: The default for the intercharacter delay is set to '140us' and is the most common configuration; however, your PC may be different. When you scan a barcode, if some stray or scrambled characters appear, increase the intercharacter delay to slow down the transfer rate.

Beep Settings



Beep Off



Beep Hi



Beep Medium *



Beep Low to High

 


Beep High to Low



Beep Low

*Default

Interblock Delay**0ms *****10ms****50ms****100ms****200ms****500ms*****Intercharacter Delay*****140us *****500us****1ms****4ms****16ms**

*Default

- **Caps Lock Auto (For PC XT/AT only):**
In Auto Trace mode, the scanner will keep track of the Caps Lock status automatically. For some PCs, the scanning performance may be compromised because of the auto tracing. If the scanning performance is poor (or cannot scan) or the scanner cannot output the upper/lower case characters correctly, try to select one of the next two choices instead of auto tracing.
- **Caps Lock Off:**
When the keyboard is in the unshifted state (Caps Lock is not pressed), select “Lower Case.”
- **Caps Lock On:**
When the keyboard is in the shifted state (Caps Lock is on), select “Upper Case.”



Caps Lock On



Caps Lock Off *



Caps Lock Auto

The 'Keyboard Language' setting controls the key codes for your keyboard's language.



U.S. *



German



French



Spanish



Italian

*Default

The 'Preamble/Postamble' configuration is used to add a prefix or suffix set of characters to the barcode value. Up to 8 characters may be added for each option separately. Preamble and postamble characters can function concurrently, but need to be configured separately.

To add preamble or postamble characters, follow the steps below:

- 1) Scan the 'Clear Pre/Postamble' barcode on this page.
 - 2) Scan the 'Preamble' or 'Postamble' barcode.
 - 3) Use Appendix B on pages 32-35 to locate the characters you want to add as preamble or postamble characters. Make sure that you scan the barcode associated with each letter before preceding to the next character. For example, to add the letter "A," scan the barcode corresponding to the letter "A" on page 34. The letter "A" will always appear in your data as prefix or suffix to the barcode value.
 - 4) Scan the corresponding 'Pre/Postamble' barcode on this page to exit this setting.
-



Clear Pre/Postamble



 
Preamble




Postamble

Terminator


The 'Terminator' option is used to specify the end-of-text message and is primarily used to denote the end of the barcode value.




CR *

 

Tab

 

None

 


Space



LF



 ESC



CR + LF

Code ID

The 'Code ID' option sends a specific value when a particular barcode symbology is scanned. For example, if 'Code ID' is enabled and Code 39 is scanned, an "M" will appear in the data stream in front of the barcode value.



Code ID On



Code ID Off *

O - MSI/Plessey	T - EAN 128
S - EAN 8	K - Code 128
E - UPC E	N - Codabar
A - UPC A	D - Full ASCII Code 39
F - EAN 13	M - Std. Code 39
L - Code 93	I - Interleaved 2 of 5

*Default

Enable



Enable All



MSI Plessey



Interleaved 2 of 5 *



Code 128 *



Codabar *



Code 39 *

Disable



Disable All



MSI Plessey *



Interleaved 2 of 5



Code 128



Codabar



Code 39

*Default

Enable



UPC A *



UPC E *



EAN 8 *



EAN 13 *



Code 93

Disable



UPC A



UPC E



EAN 8



EAN 13



Code 93 *

*Default

Code 39 is variable length and is the most frequently used symbology in industrial barcode systems today. It is extensively used within the Department of Defense (DOD). The principal feature is to encode messages using the full alphanumeric character set. Standard Code 39 contains only 43 characters (0-9, A-Z, \$, /, %, +, -, ., SPACE) and can be extended to a 128 character symbology (full ASCII) by combining one of the special characters (S, /, %, +) with a letter (A-Z) to form the characters that are not present in the standard Code 39 symbology.

See page 6 for information on setting the minimum and maximum lengths.

**Enable Code 39 *****Disable Code 39****Enable Code 39
Full ASCII *****Disable Code 39
Full ASCII****Check Digit Do
Not Calculate *****Check Digit Calculate
And Send****Check Digit Calculate
But Do Not Send *****Minimum Length (1 *)****Maximum Length (48 *)**

*Default

Interleaved 2 of 5 is a variable length, even numbered, numeric barcode. It is typically used in industrial and master carton labeling and also in the automobile industry. The symbology uses bars to represent the first digit of a pair and the interleaved (white) spaces to represent the second digit of a character pair.

See page 6 for information on setting the minimum and maximum lengths.



**Enable Interleaved
2 of 5 ***



**Disable Interleaved
2 of 5**



**Check Digit Do
Not Calculate ***



**Check Digit Calculate
And Send**



**Check Digit Calculate
But Do Not Send**



Minimum Length (6 *)



Maximum Length (48 *)

Code 93 encodes the full 128 ASCII character set using 9 modules arranged into 3 bars with adjacent spaces. Two of the characters are check characters. Code 93 is similar to Code 39 but encodes more characters per inch.



Enable Code 93



Disable Code 93 *



Minimum Length (6 *)



Maximum Length (48 *)

*Default

Code 128 is the most flexible of all the common linear symbologies. It supports alpha and numeric characters easily, has the highest number of characters per inch, and is variable length.

See page 6 for information on setting the minimum and maximum lengths.



Enable Code 128 *



Minimum Length (5 *)



Disable Code 128



Maximum Length (48 *)



**UCC/EAN 128
Enable ***



**UCC/EAN 128
Disable**



**UCC/EAN 128
Code ID Enable**



**UCC/EAN 128
Code ID Disable ***



**Function 1
Character Send**



**Function 1
Character Do Not Send ***



**Define UCC/EAN 128
Group Separator**

To Define UCC/EAN 128 Group Separator:

1. Scan Define UCC/EAN 128 Group Separator
2. Scan ASCII code from pages 31-34
3. Scan Define UCC/EAN 128 Group Separator

Note: Default Group Separator is GS

*Default

MSI Plessey is a variable length numeric symbology and is primarily used in marking retail shelves. Each character consists of four bars with intervening spaces for each encoded digit, one or two symbol check digits, and a reverse start code.

See page 6 for information on setting the minimum and maximum lengths.

**Enable****Disable *****Check Digit Verify
And Send *****Check Digit Verify
And Do Not Send****Check Digit Double
MOD 10****Check Digit Double 11
Plus MOD 10****Check Digit Single MOD 10****Minimum Length (6 *)****Maximum Length (48 *)**

*Default

Codabar is a variable length symbology capable of encoding six special alphanumeric characters, capital letters A through D, T, N, *, E, and all numeric digits. Codabar is one of the oldest barcode symbologies and is still used in some library applications. It should not be considered for new applications except under unusual circumstances.

See page 6 for information on setting the minimum and maximum lengths.



Codabar Enable *



Codabar Disable



Send Start/Stop *



**Do Not Send
Start/Stop**



**Check Digit
Do Not Verify ***



**Check Digit
Verify And Send**



**Check Digit Verify
And Do Not Send**



Minimum Length (6 *)



Maximum Length (48 *)

*Default

UPC-A (Universal Product Code-A) is fixed length and is the most common UPC barcode for retail product labeling. It is seen in most grocery stores across the United States. The symbology encodes a 12-digit number. The first six digits are assigned from the Uniform Code Council (UCC). The next five digits are assigned by the manufacturer, and the final digit is a modulo 10 check digit. The nominal height for the UPC-A barcode is one inch. The reduced size is 80% of the nominal size.

**UPC-A Enable *****UPC-A Disable****Send Leading Digit *****Do Not Send
Leading Digit****Send Check Digit *****Do Not Send
Check Digit**

This option enables the two and five digit supplements for the UPC and EAN/JAN barcode symbologies.



**5 Digit Supplement
Enable**



**5 Digit Supplement
Disable ***



**2 Digit Supplement
Enable**



**2 Digit Supplement
Disable ***



Transmit if Present



Must Be Present *

*Default

UPC-E (Universal Product Code-E) is fixed length and is a compressed six digit code used for marking small packages, including magazines and paperback books. UPC-E symbols are UPC-A symbols that have been zero suppressed (i.e. consecutive zeros are not included in the symbol). The printed value of the UPC-E code is a twelve digit code. The nominal height for the UPC-E barcode is one inch. The reduced size is 80% of the nominal size.

**UPC-E Enable *****UPC-E Disable****Send Leading Digit *****Do Not Send
Leading Digit****Send Check Digit *****Do Not Send
Check Digit****Expand to UPC-A
On****Expand to UPC-A
Off ***

*Default

This option enables the two and five digit supplements for the UPC and EAN/JAN barcode symbologies.



**5 Digit Supplement
Enable**



**5 Digit Supplement
Disable ***



**2 Digit Supplement
Enable**



**2 Digit Supplement
Disable ***



 
 
Transmit if Present



Must Be Present *

*Default

The EAN/JAN-8 is fixed length and is similar to the UPC-E code, but includes two more digits for the country code. The nominal height for the EAN/JAN-8 barcode is one inch. The reduced size is 80% of the nominal size.

**EAN-8 Enable *****EAN-8 Disable****Send Leading Digit *****Do Not Send
Leading Digit****Send Check Digit *****Do Not Send
Check Digit**

*Default

This option enables the two and five digit supplements for the UPC and EAN/JAN barcode symbologies.



**5 Digit Supplement
Enable**



**5 Digit Supplement
Disable ***



 
**2 Digit Supplement
Enable**



**2 Digit Supplement
Disable ***



Transmit if Present



Must Be Present *

*Default

The EAN/JAN-13 (European Article Number/Japanese Article Number) is fixed length and is similar to the UPC-A symbology, but encodes a 13th digit. The nominal height for the EAN/JAN-8 barcode is one inch. The reduced size is 80% of the nominal size.


EAN-13 Enable *

EAN-13 Disable

Send Leading Digit *

**Do Not Send
Leading Digit**

Send Check Digit *

**Do Not Send
Check Digit**

ISBN Enable

ISBN Disable *

ISSN Enable

ISSN Disable *

*Default

This option enables the two and five digit supplements for the UPC and EAN/JAN barcode symbologies.



**5 Digit Supplement
Enable**



**5 Digit Supplement
Disable ***



**2 Digit Supplement
Enable**



**2 Digit Supplement
Disable ***



Transmit if Present



Must Be Present *

*Default

Note: Make sure that the appropriate barcode symbology is configured properly and enabled before trying to scan. Use the 'Barcode Symbologies' configuration beginning on page 14 to enable specific symbologies.

Code 39*



Code 93



Interleaved 2 of 5 *



Codabar *



Code 128*



MSI/Plessey



*Default

UPC-A*

UPC-A
w/5 digit supplementUPC-A
w/2 digit supplement

UPC-E*

UPC-E
w/5 digit supplementUPC-E
w/2 digit supplement

*Default

EAN/JAN-13*



EAN/JAN-13
w/5 digit supplement



EAN/JAN-13
w/2 digit supplement



EAN/JAN-8*



EAN/JAN-8
w/5 digit supplement



EAN/JAN-8
w/2 digit supplement



*Default

Use this ASCII Table to add preamble and postamble characters to your barcode value. Please refer to the appropriate configuration section for the number of characters that can be configured.



NUL



LF



DC4



SOH



VT



NAK



STX



FF



SYN



ETX



CR



ETB



EOT



SO



CAN



ENQ



SI



EM



ACK



DLE



SUB



BEL



DC1



ESC



BS



DC2



FS



HT



DC3



GS



RS



)



4



US



*



5



SP



+



6



!



,



7



"



-



8



#



.



9



\$



/



:



%



0



;



&



1



<



'



2



=



(



3



>



?



J



U



@



K



V



A



L



W



B



M



X



C



N



Y



D



O



Z



E



P



[



 
F



Q



\



Script Pi



R



]



H



S



^



I



T



-



\



k



v



a



l



w



b



m



x



c



n



y



d



o



z



e



p



{



f



q



|



g



r



}



h



s



~



i



t



DEL



j



u

**F1****F10****Cursor Right****F2****F11****Cursor Up****F3****F12****Cursor Left****F4****Tab****Cursor Down****F5****Back Tab****Page Up****F6****Esc****Page Down****F7****End****Ins****F8****Home****Enter****F9****Back Space****Del**

MODEL	WLR8900
PERFORMANCE	
Sensor	2660 pixels CCD linear imager sensor
Depth of Field	30mm to 330mm (40 mil) $\pm$ 20mm
Best Resolution	0.127mm (5mil).
Scan Rate	45 scan / sec
Decoding Rate	100 scan / sec (10m / sec)
Scanning Width	120mm (1 mm barcode)
Sunlight	5000 Lux / Max (Flourescent Light)
MECHANICAL	
Dimensions	106 (L) x 62 (W) x 160 (H) mm
Weight	Approximately 160g (without cable)
Cable	210 cm in length (Interchangeable cable)
ELECTRICAL	
Operating Voltage	+ 5 VDC $\pm$ 10%
POWER CONSUMPTION	
Standby	<100mA
Working	<220mA
Surge	<1000mA
ENVIRONMENTAL	
Operating Temperature	0°C to 50°C
Storage Temperature	-20°C to 60°C
Relative Humidity	0% to 95% non-condensing
Mechanical Shock	1.5m drop onto concrete
Conformance	FCC class A and CE approval in progress
SYMBOLOGIES	
UPC-E, UPC-A, EAN-8, EAN13, UCC/EAN128, JAN, ISBN, ISSN, Code 39, Code 93, Code 128, Interleave 2 of 5, Industrial 2 of 5, Matrix 2 of 5, IATA 2 of 5, China Post Code (Toshiba Code), MSI, Codabar, ABC Codabar, CX Codabar, Code 11, UK Plessey, Telepen, Code 128, RSS	

Warranty Information

Wasp Barcode Technologies products are warranted against defects in workmanship and materials for a period of one year from the date of shipment, provided that the product remains unmodified and is operated under normal and proper conditions.

This warranty is limited to repair or replacement at Wasp Barcode Technologies option, with reasonable promptness after being notified. These provisions do not prolong the original warranty term for any product which has been repaired or replaced by Wasp Barcode Technologies.

This warranty applies to the original owner and does not extend to any product which has been subject to misuse, neglect, accidental damage, unauthorized repair, or tampering.

No other express warranty is given. The replacement or repair of a product is your exclusive remedy. Any other implied warranty of merchantability or fitness is limited to the duration of this written warranty. Some states, provinces, and countries do not allow limits on how long an implied warranty lasts, so the above limitation may not apply to you.

In no event shall Wasp Barcode Technologies be liable for consequential damages. Some states, provinces, and countries do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you.

Q: How do I configure the scanner for a notebook (or laptop) computer?

A: Scan the “Notebook” barcode on page 7.

Q: How do I change the terminator to a Tab?

A: Scan the “Tab” barcode on page 13.

Q: How do I remove the terminator?

A: Scan the “None” barcode on page 13.

Q: How do I enable the Full ASCII character set for the Code 39 barcode symbology?

A: Scan the following “Enable Code 39 Full ASCII” bar code on page 16.

Product Support

If you experience any problems with the Wasp WLR8900 Series Scanners that you are unable to resolve, call for technical assistance at (214) 547-4100 ext 2, Monday through Friday, 8:00 AM - 5:00 PM Central Standard Time. Visit www.waspbarcode.com/support anytime.

Wasp Barcode Technologies



Productivity Solutions for Small Business that Increases Productivity & Profitability

- Barcode, data collection solutions
- Small business focus
- Profitable growth since 1986
- Over 200,000 customers
- Business unit of Datalogic SPA

Wasp® Barcode Technologies

1400 10th Street

Plano, TX 75074

Phone: 214-547-4100 • Fax: 214-547-4101

www.waspbarcode.com



Wasp Barcode Technologies

1400 10th Street
Plano, TX 75074

www.waspbarcode.com

0308 US