

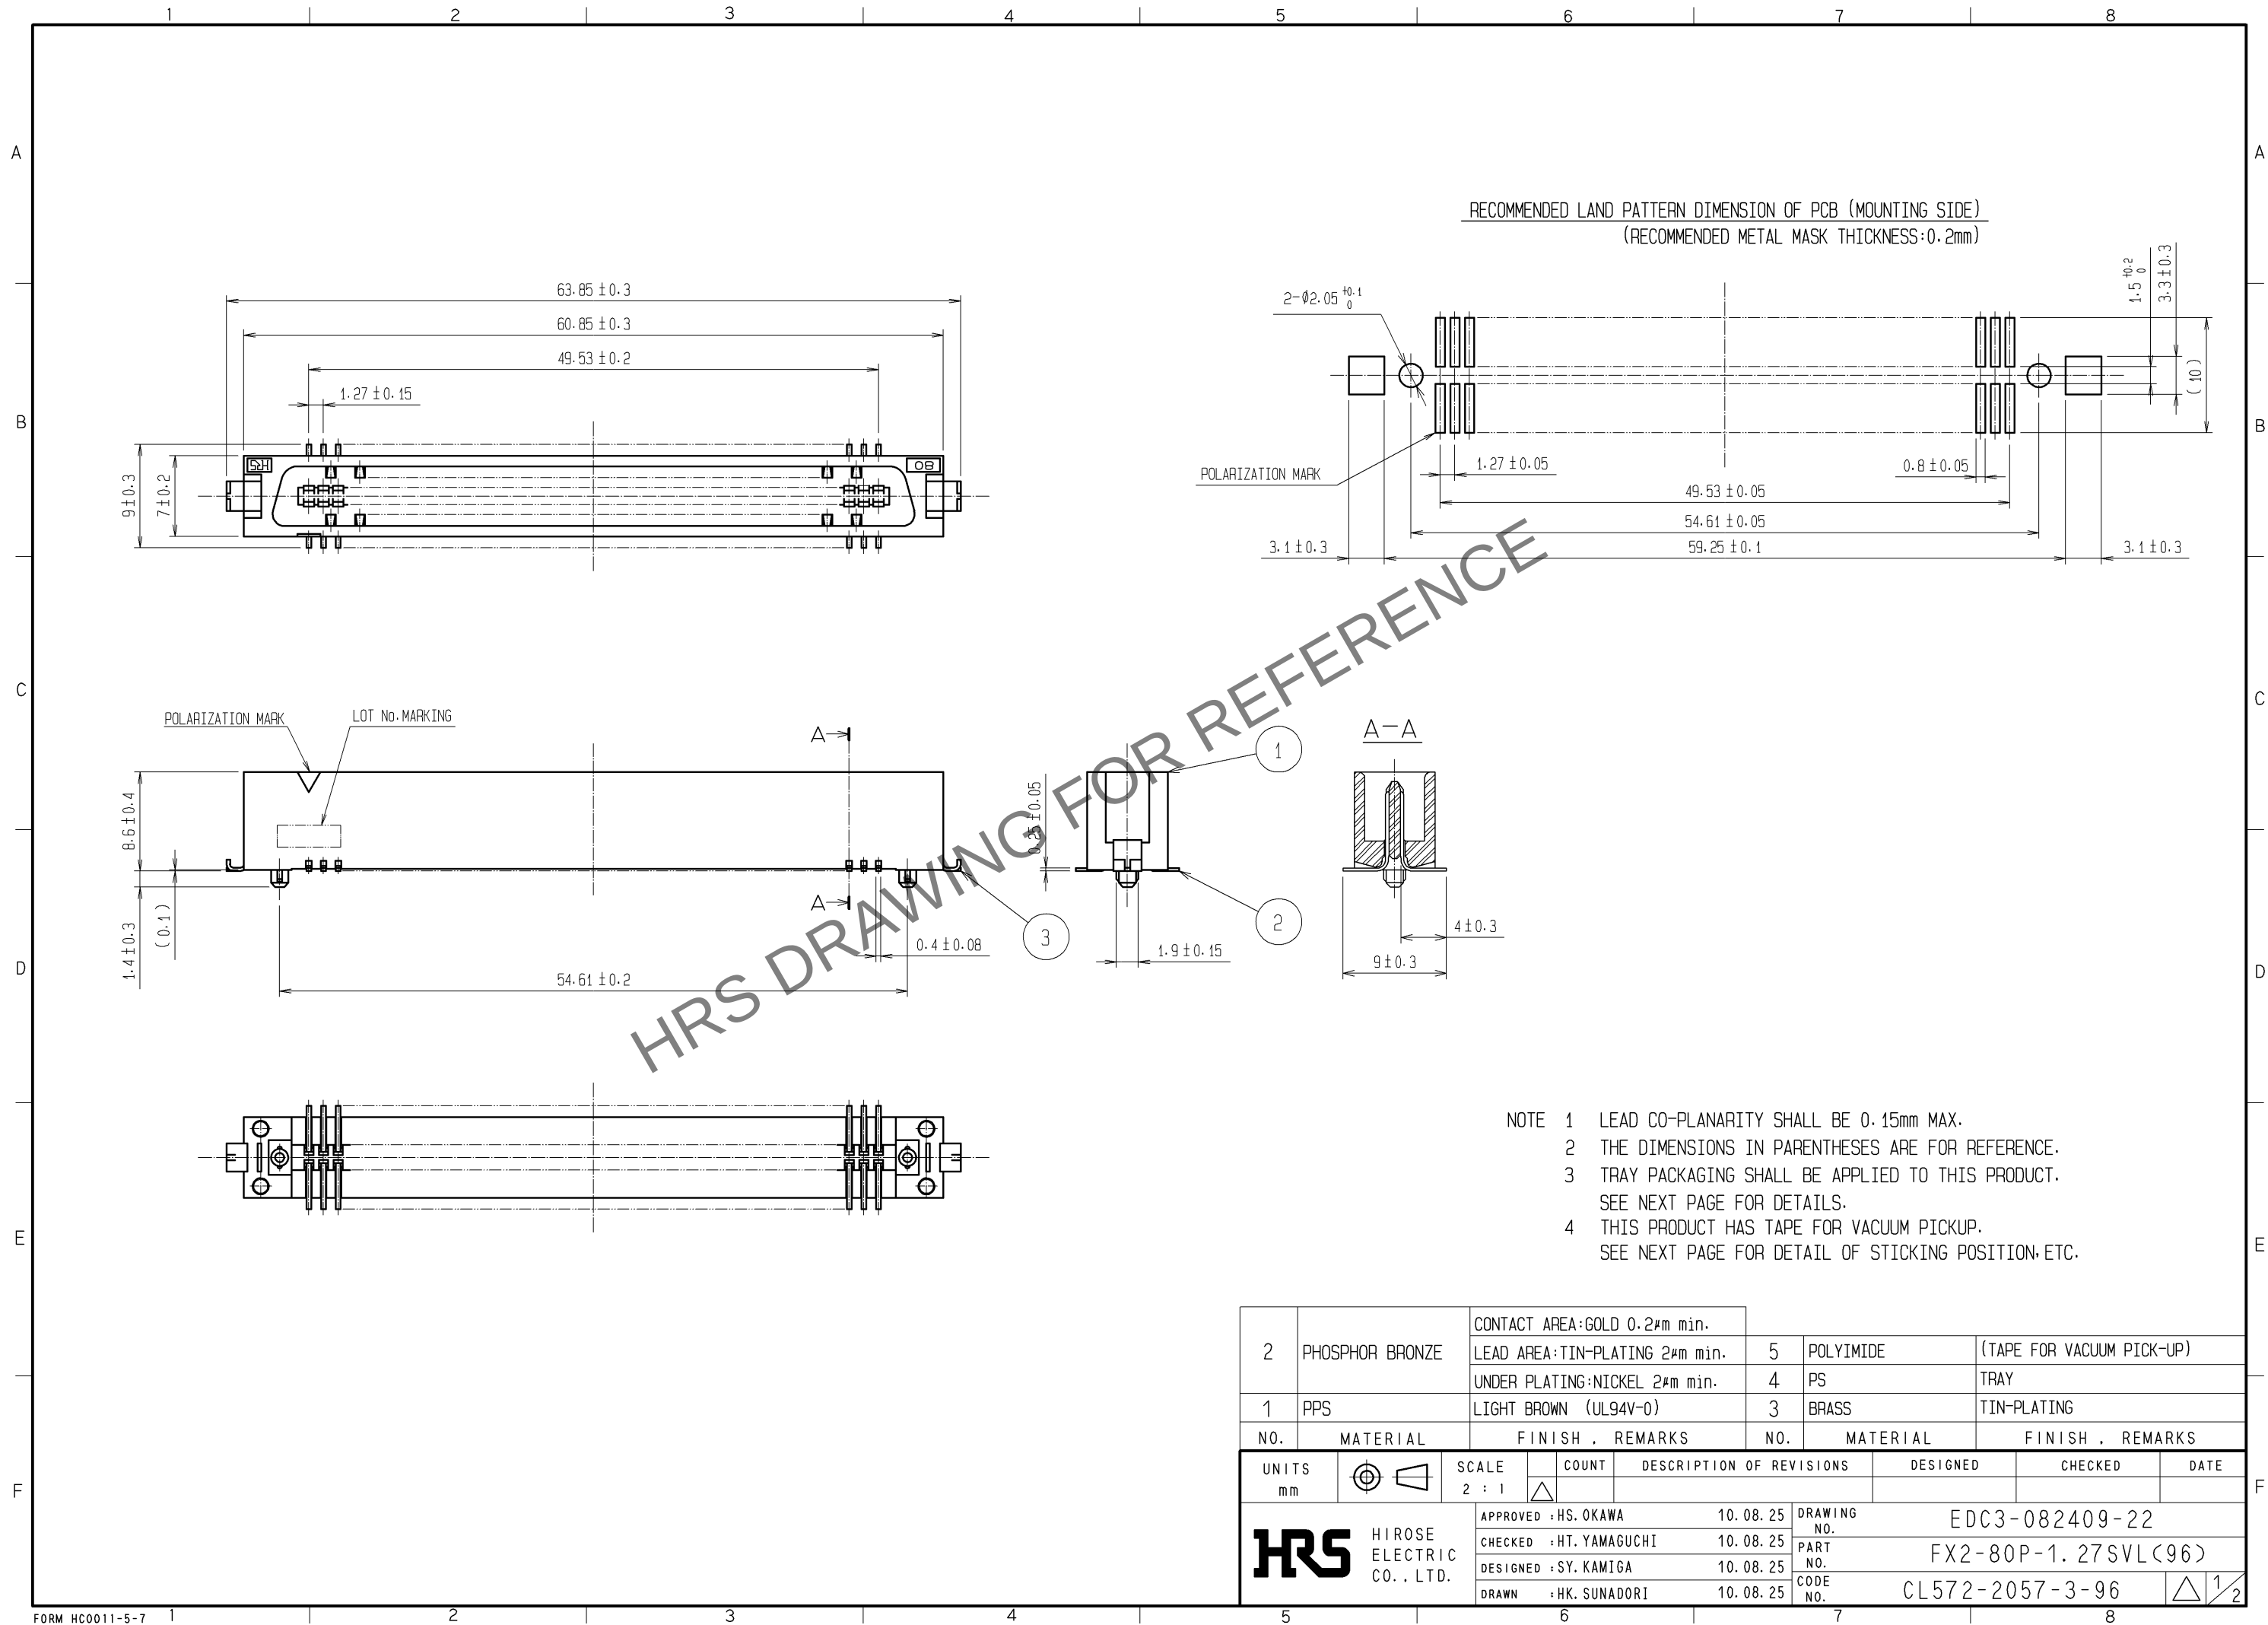


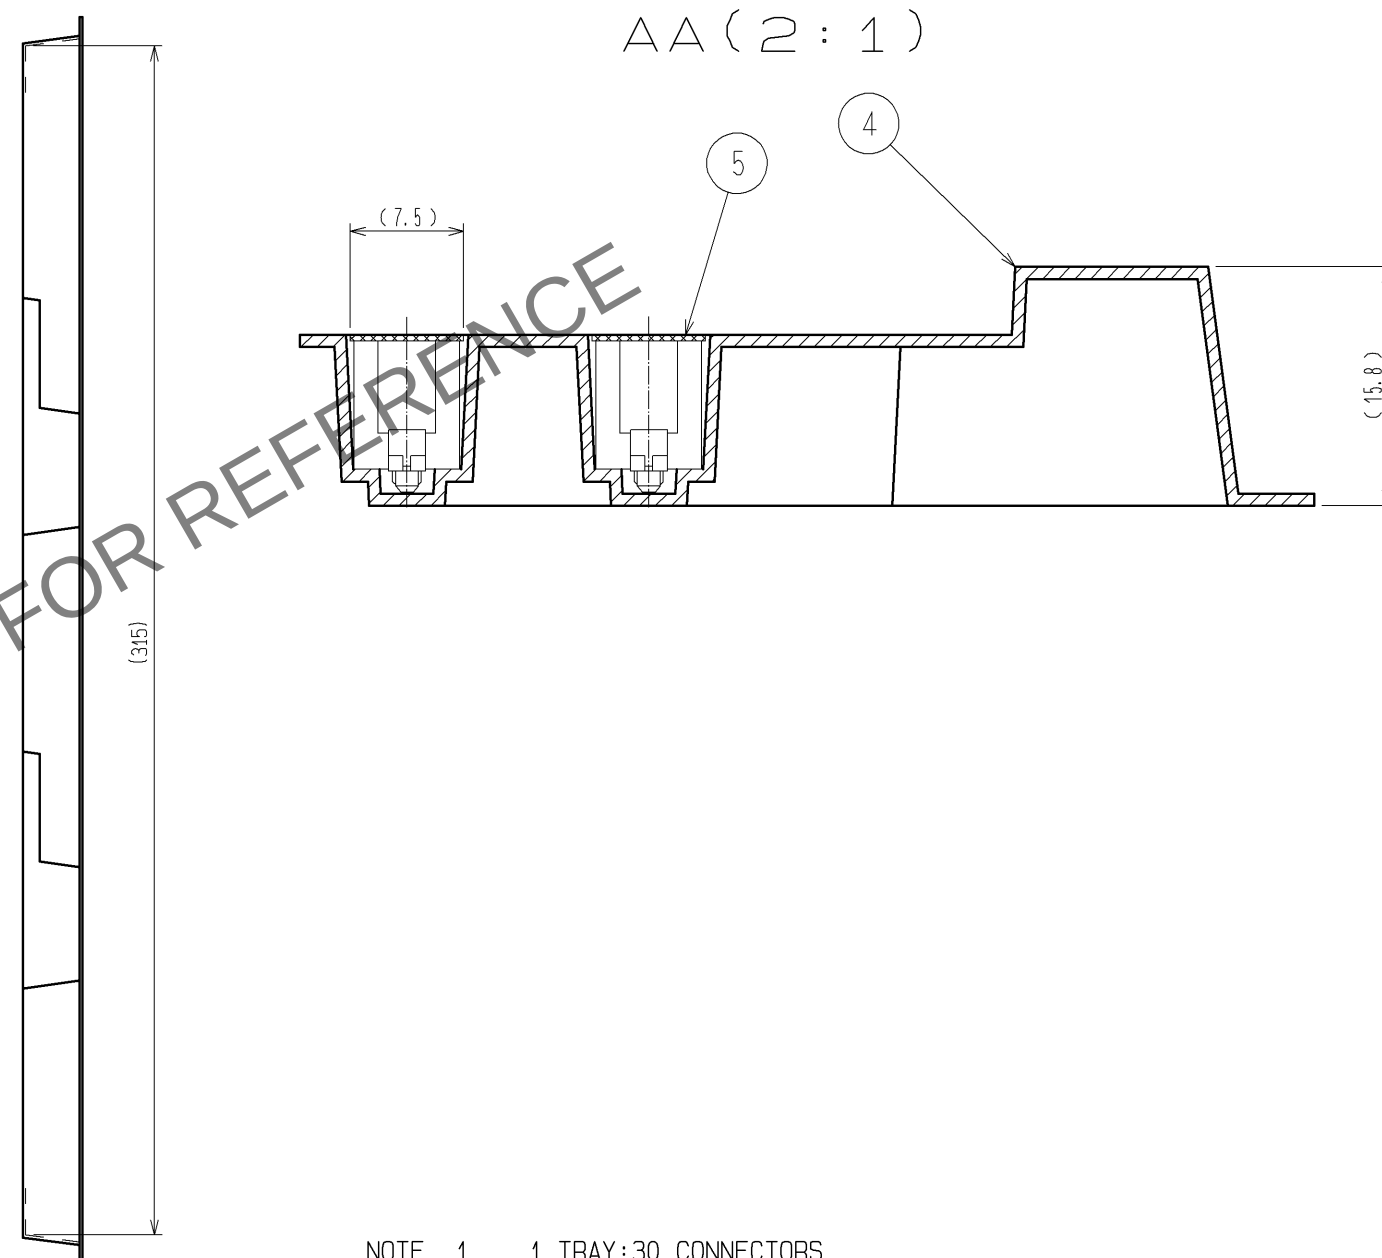

DRAWING FOR PACKING(1:2)

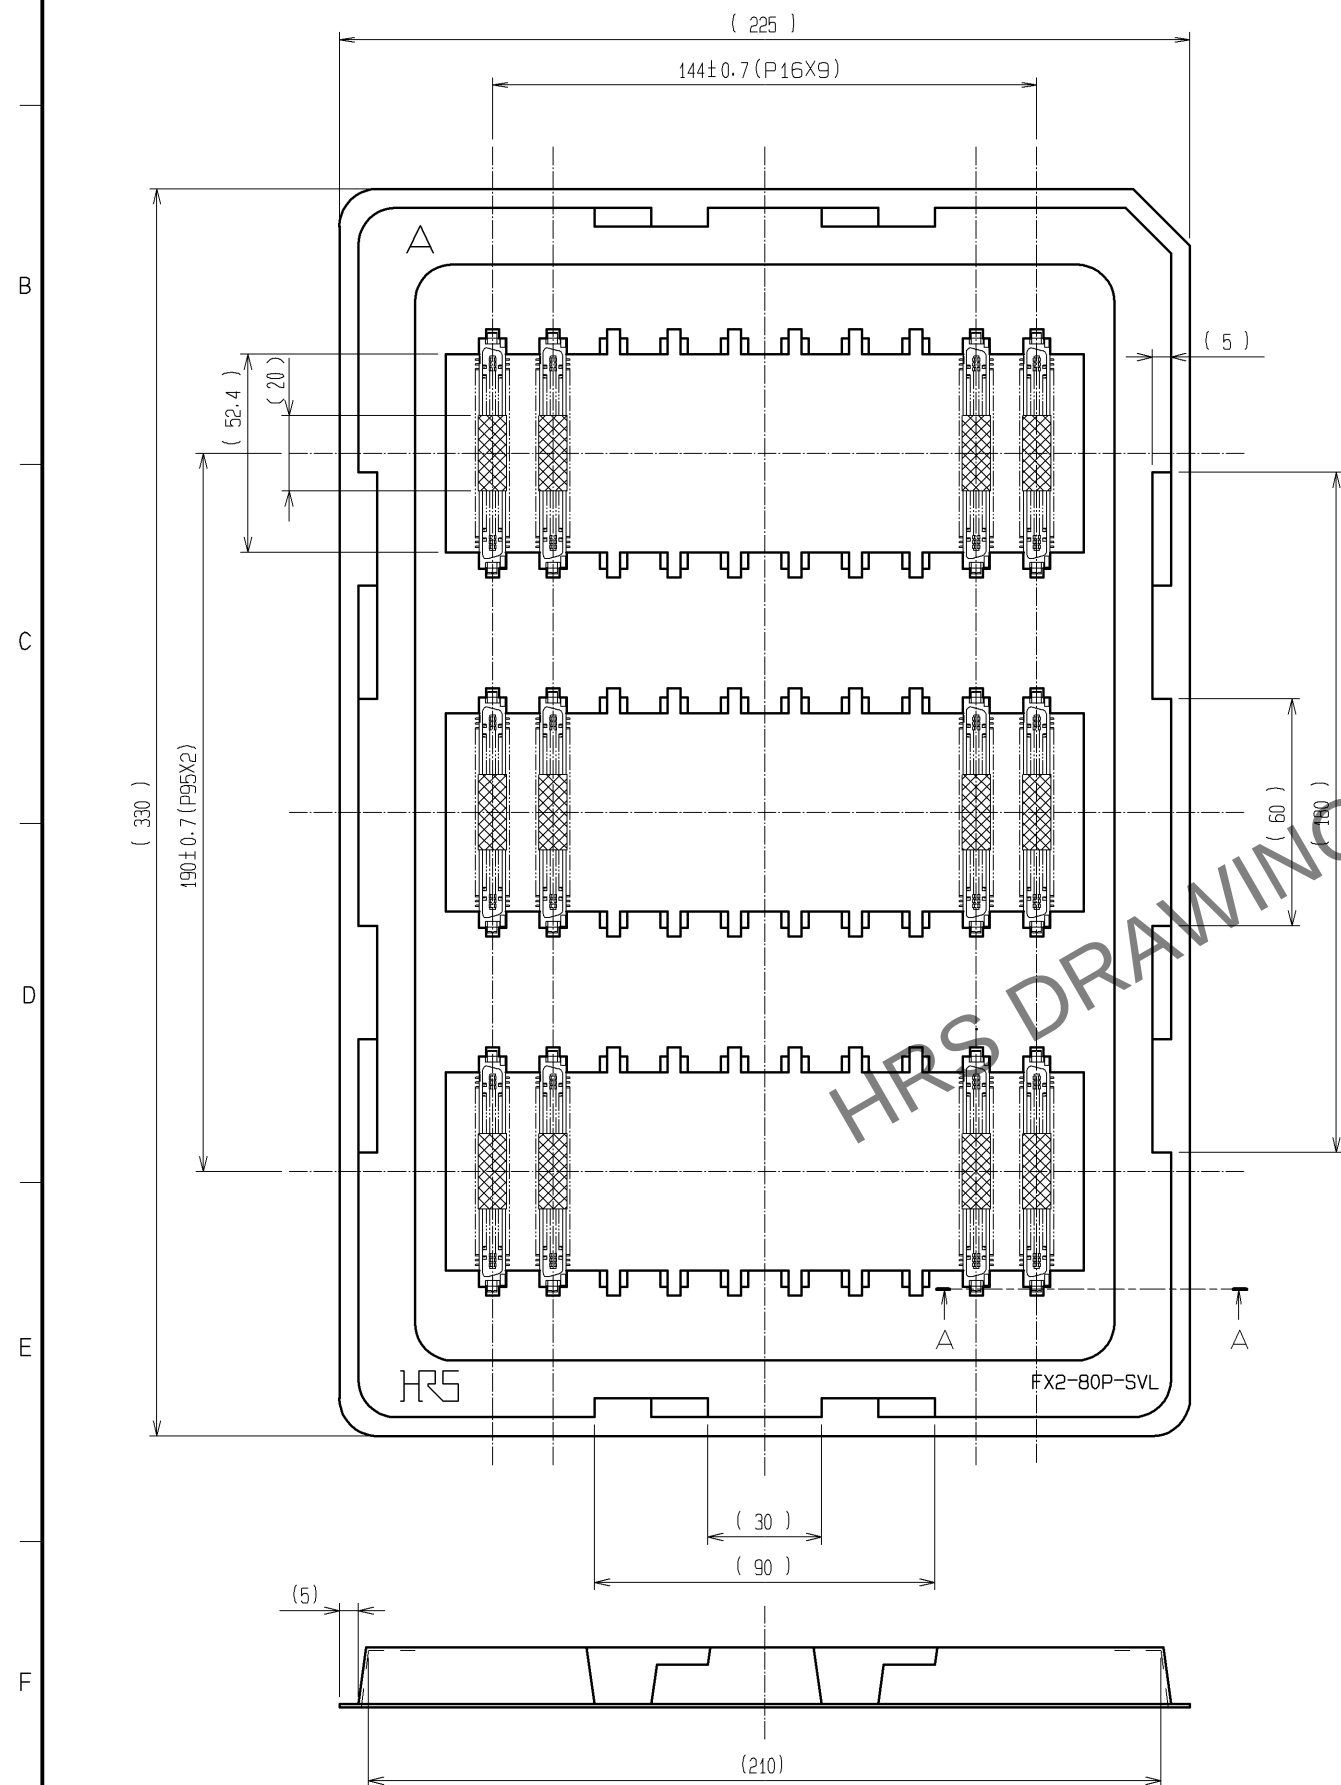

NOTE 1 1 TRAY:30 CONNECTORS
2 SETTING POSITION OF CONNECTORS IN THE TRAY SHALL BE ARRANGED
IN ACCORDANCE WITH DRAWING.
3 REMOVE THE VACUUM PICK-UP TAPE AFTER MOUNTING THE CONNECTOR.
4 THE DIMENSIONS IN PARENTHESES ARE FOR REFERENCE.