


UNDERCARPET POWER CABLE KIT



A

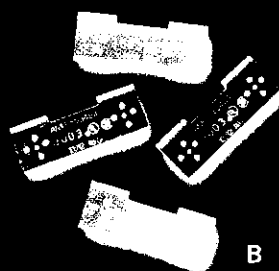

B



C



D



E



F



G



H

Taps and Splices require the following components:

- Tap or Splice (one per conductor of Undercarpet Power Cable)

- Hand Tool

- Insulator Kit

- Top Shield

- Top Shield Bonding Clip

(minimum of two per Tap or Splice)

- Hold Down Tape

DCR removal requires Floor Fitting Patch Kit which includes:

- Insulator Kit

- Top Shield

- Top Shield Bonding Clip

(minimum of four per DCR)

- Hold Down Tape

- Spray Adhesive

Description	Quantity	Figure	Part Number
Individual Tap	15	A	553455-2
Individual Splice	15	B	553454-1
Tap/Splice Hand Tool	1	C	91384-1
Top Shield Bonding Clip*	50	D	553534-1*
Insulator Kit	5	E	556411-1
Spray Adhesive	12	F	553453-1
	1	F	6-553453-1
Hold Down Tape, 45.72m (180ft)	1	G	553481-1
Floor Fitting Patch Kit	1	H	1479151-1

*Note: Top Shield Bonding Clips are required for turns, taps and splices.

For More Information, Call 1-800-553-0938

www.ampnetconnect.com