




MOST19-8-A

Ruland MOST19-8-A, 8mm Oldham Coupling Hub, Aluminum, Set Screw Style, 19.1mm OD, 9.7mm Length

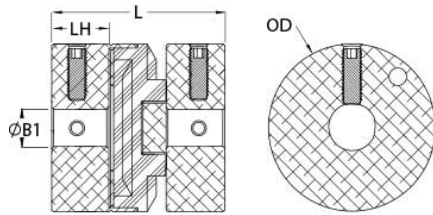

Description

Ruland MOST19-8-A is a set screw oldham coupling hub with a 8mm bore, 19.1mm OD, and 7.6mm length. It is a component of a three-piece design consisting of two anodized aluminum hubs press fit onto a center disk. This three-piece design allows for a highly customizable coupling that easily combines clamp or set screw hubs with inch, metric, keyed, and keyless bores. Disks are available in three materials allowing the user to tailor coupling performance to their application. MOST19-8-A can accommodate all forms of misalignment and is especially useful in applications with high parallel misalignment (up to 10% of the OD). It operates with low bearing loads protecting sensitive system components such as bearings and has a balanced design for reduced vibration at speeds up to 6,000 RPM. Hardware is metric and tests beyond DIN 912 12.9 standards for maximum torque capabilities. MOST19-8-A is machined from bar stock that is sourced exclusively from North American mills and is RoHS3 and REACH compliant. It is manufactured in our Marlborough, MA factory under strict controls using proprietary processes.

Product Specifications

Bore (B1)	8 mm	Outer Diameter (OD)	0.750 in (19.1 mm)
B1 Max Shaft Penetration	7.6 mm	Bore Tolerance	+0.03 mm / -0.00 mm
Hub Width (LH)	7.62 mm	Length (L)	0.875 in (22.2 mm)
Recommended Shaft Tolerance	+0.000 mm / -0.013 mm	Forged Set Screw	M3
Number of Screws	1 ea	Screw Material	Alloy Steel
Screw Finish	Black Oxide	Seating Torque	0.92 Nm
Hex Wrench Size	1.5 mm	Torque Specifications	Torque ratings vary with insert selection
Angular Misalignment	0.5°	Parallel Misalignment	0.008 in (0.20 mm)
Max Parallel Misalignment	0.075 in (1.91 mm)	Axial Motion	0.004 in (0.10 mm)
Moment of Inertia	$2.994 \times 10^{-7} \text{ kg-m}^2$	Maximum Speed	4,500 RPM
Recommended Inserts	OD12/19-AT , OD12/19-NL , OD12/19-PEK	Full Bearing Support Required?	Yes
Zero-Backlash?	Yes	Mechanical Fuse?	Yes
UPC	634529062258	Country of Origin	USA
Material Specification	2024-T351 Aluminum Bar	Finish	Black Anodized
Finish Specification	Sulfuric Anodized MIL-A-8625 Type II, Class 2 and ASTM B580 Type B Black Anodize	Manufacturer	Ruland Manufacturing
Temperature	Acetal Disk -10°F to 150°F (-23°C to 65°) Nylon Disk -10°F to 130°F (-23°C to 54°C) PEEK Disk -10°F to 300°F (-23°C to 148°C)	Weight (lbs)	0.012300
Tariff Code	8483.60.8000	UNSPC	31163015
Note 1	"Now available in stainless steel!"		
Note 2	"Performance ratings are for guidance only. The user must determine suitability for a particular application."		
Note 3	"Torque ratings for the couplings are based on the physical limitations/failure point of the torque disks. Under normal/typical conditions the hubs are capable of holding up to the rated torque of the disks. In some cases, especially when the smallest standard bores are used or where shafts are undersized, slippage on the shaft is possible below the rated torque of the disks. Keyways are available to provide additional torque capacity in		

the shaft/hub connection when required. Please consult technical support for more assistance."

Prop 65

 **WARNING** This product can expose you to the chemical Ethylene Thiourea, known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

Installation Instructions

1. Align the bores of the MOST19-8-A oldham coupling hubs on the shafts that are to be joined and determine if the misalignment parameters are within the limits of the coupling. (*Angular Misalignment: 0.5° Parallel Misalignment: 0.008 in (0.20 mm), Axial Motion: 0.004 in (0.10 mm)*)
 2. Rotate the hubs on the shaft so the drive tenons are located 90° from each other.
 3. Place a torque disk so one groove fits over the drive tenons of a hub and center the disk by hand.
 4. Insert a shim with the thickness of the coupling's axial motion rating into the groove of the torque disk.
 5. Slide the tenons of the second hub into the mating groove in the disk until it touches the shim stock.
 6. Fully tighten the M3 screw(s) on each hub to the recommended seating torque of 0.92 Nm using a 1.5 mm hex torque wrench.
 7. Remove the shim stock to leave a small gap between the top of the drive tenons and the torque disk to allow for axial movement.
-