

# Approval Sheet

## (產品承認書)

產品名稱 (Product)	<u>BLE AT Command Module</u> <u>in <b>Peripheral / Slave</b> role</u>
解決方案 (Solution)	<u>Nordic nRF52832 WLCSP Package</u>
產品型號 (Model No.)	<u><b>MDBT42V – AT</b> (Chip Antenna)</u> <u><b>MDBT42V – PAT</b> (PCB Antenna)</u>
韌體版本 (FW Rev.)	<u>1.2</u>

*Advantage of MDBT42V & MDBT42V-P series:*

- Long working distance:*  
**MDBT42V:** over 80 meters in open space.  
**MDBT42V-P:** up to 60 meters in open space.
- Declaration ID includes all Nordic applied profiles.*
- Granted main regional certification such as FCC (USA), CE(EU)  
TELEC (Japan), SRRC (China), IC (Canada), NCC (Taiwan) and KC (South Korea).*

# Index

<b>1. Overall Introduction .....</b>	<b>4</b>
<b>2. AT Command .....</b>	<b>4</b>
2.1. List of supported commands.....	4
2.2. AT Command Sets.....	5
2.2.1. “Write” Commands.....	5
2.2.2. “Read” Commands .....	8
2.2.3. Response (Default).....	9
2.3. Default Info .....	11
2.4. Pin Assignment .....	12
<b>3. How to Control via External MCU .....</b>	<b>14</b>
3.1. How to Send AT Commands.....	14
3.2. How to Transmit Data .....	15
3.3. How to Return to Flashed Default Setting.....	15
<b>4. Test Report.....</b>	<b>16</b>
4.1. Current Test .....	16
4.2. Throughput Test.....	17
<b>5. Product Dimension .....</b>	<b>19</b>
5.1. PCB Dimensions & Pin Indication.....	19
5.2. Recommended Layout of Solder Pad .....	21
5.3. RF Layout Suggestion (aka Keep-Out Area) .....	23
5.4. Footprint & Design Guide .....	25
<b>6. Main Chip Solution.....</b>	<b>26</b>
<b>7. Shipment Packaging Information .....</b>	<b>27</b>
7.1. Marking on Metal Shield .....	28
7.2. Packaging Info.....	29
7.3. Order Code.....	31
<b>8. Specification .....</b>	<b>32</b>
8.1. Absolute Maximum Ratings .....	32
8.2. Operation Conditions .....	32
8.3. Electrical Specifications.....	33

<b>9. Antenna</b> .....	<b>38</b>
9.1. MDBT42V.....	38
9.2. MDBT42V-P.....	39
<b>10. Reference Circuit</b> .....	<b>40</b>
<b>11. Certification</b> .....	<b>41</b>
11.1. Declaration ID.....	41
11.2. FCC Certificate (USA) .....	42
11.3. TELEC Certificate (Japan).....	43
11.4. NCC Certificate (Taiwan) .....	44
11.5. CE Test Report (EU) .....	46
11.6. IC Certificate (Canada).....	48
11.7. SRRC Certificate (China).....	49
11.8. KC Certificate .....	50
11.9. RoHS & REACH Report .....	51
11.10. End-Product Label.....	51
<b>12. Notes and Cautions</b> .....	<b>54</b>
<b>13. Basic Facts for nRF52 Chip</b> .....	<b>55</b>
<b>14. Useful Links</b> .....	<b>56</b>
<b>History of Firmware Revision</b> .....	<b>57</b>
<b>Full List of Raytac’s BLE Modules</b> .....	<b>58</b>
<b>Release Note</b> .....	<b>62</b>

# 1. Overall Introduction

Raytac's MDBT42V-AT & MDBT42V-PAT is a BT 5.2 stack (Bluetooth low energy or BLE) module designed based on **Nordic nRF52832 SoC solution**, which incorporates: **UART** interface in only peripheral/slave role for data bridge in compact size **(L) 8.4 x (W) 6.4 x (H) 1.75 or 1.50 mm.**

## 2. AT Command

### 2.1. List of supported commands

- Setting of device name
- Choose data rate of 1Mbps or 2Mbps on-air
- Set TX output power in 5 levels.
- Set advertising time
- Set connection interval under Mode 2
- Enable/disable advertising
- Set LED pattern indicating advertising or connecting status
- 7 sets of UART baud rates
- Enable/disable UART flow control
- Enable/disable interface of UART hardware
- Support 4 programmable output GPIO
- Power-down mode for power saving and GPIO wake-up
- Support DC-to-DC and LDO power mode
- Use internal or external 32.768KHz oscillator
- Recover-to-default setting with hardware and software method
- System reset of hardware and software
- Set serial number and retrieve
- Set or retrieve MAC Address
- Retrieve ADC value for battery detection, delivering the information through battery service.
- Support maximum MTU 247bytes / data payload up to maximum 244 bytes

## 2.2. AT Command Sets

### 2.2.1. "Write" Commands

No.	Command	Description
(1)	AT+NAME	Set device name. Max. length of 20 characters e.g. AT+NAME123 (device name 123, 3 characters)
(2)	AT+RESET	Set to reset system
(3)	AT+ADVSTART	Set to start advertising
(4)	AT+ADVSTOP	Set to stop advertising
(5)	AT+SLEEP	Set to get into deep sleep mode
(6)	AT+BAUDRATE9600	Set UART baud rate at 9600 bps,n,8,1
(7)	AT+BAUDRATE19200	Set UART baud rate at 19200 bps,n,8,1
(8)	AT+BAUDRATE38400	Set UART baud rate at 38400 bps,n,8,1
(9)	AT+BAUDRATE57600	Set UART baud rate at 57600 bps,n,8,1
(10)	AT+BAUDRATE115200	Set UART baud rate at 115200 bps,n,8,1
(11)	AT+BAUDRATE230400	Set UART baud rate at 230400 bps,n,8,1 <b>(recommended enabling flow control)</b>
(12)	AT+BAUDRATE460800	Set UART baud rate at 460800 bps,n,8,1 <b>(recommended enabling flow control)</b>
(13)	AT+FLOWCONTROLDIS	Disable UART flow control
(14)	AT+FLOWCONTROLEN	Enable UART flow control
(15)	AT+TXPOWER4DBM	Set RF TX power at + 4dBm
(16)	AT+TXPOWER0DBM	Set RF TX power at 0dBm
(17)	AT+TXPOWER-4DBM	Set RF TX power at - 4dBm
(18)	AT+TXPOWER-8DBM	Set RF TX power at - 8dBm
(19)	AT+TXPOWER-20DBM	Set RF TX power to - 20dBm
(20)	AT+XTALINTERNAL	Use internal RC 32.768KHZ low frequency oscillator
(21)	AT+XTALEXTERNAL	Use external crystal 32.768KHZ low frequency oscillator
(22)	AT+CONNECTINDICATORLOW	Set logic low output when connecting BT
(23)	AT+CONNECTINDICATORHIGH	Set logic high output when connecting BT
(24)	AT+PHYMODE1MBPS	Set PHY mode at 1Mbps

No.	Command	Description
(25)	<b>AT+PHYMODE2MBPS</b>	Set PHY mode at 2Mbps
(26)	<b>AT+WAKEUPLOW</b>	Set logic low at wake-up when in deep sleep
(27)	<b>AT+WAKEUPHIGH</b>	Set logic high at wake-up when in deep sleep
(28)	<b>AT+ADVTIMEtttt</b>	Set advertising time (Hex) e.g. 0x001E (min. 30secs), 0x0258 (Max. 600secs) 0x0000 (forever)
(29)	<b>AT+DCDCDIS</b>	Disable DC to DC converter
(30)	<b>AT+DCDCEN</b>	Enable DC to DC converter
(31)	<b>AT+CONNECTINTERVALMODE0</b>	Set connection interval mode for iOS/Android APP usage (min. 20ms / Max. 40ms),
(32)	<b>AT+CONNECTINTERVALMODE1</b>	Set connection interval mode for nRF52832 Central usage (min. 8ms / Max. 8ms)
(33)	<b>AT+CONNECTINTERVALMODE2</b>	Set connection interval mode for iOS/Android APP usage (programmable : min. / Max. range is 8ms ~ 1,000ms)
(34)	<b>AT+CONNECTINTERVALTIMEtttttttt</b>	Set connection interval time (Hex), available when activating "AT+CONNECTINTERVALMODE2" e.g. 0x0008 (8ms), 0x03E8 (1,000ms), conditions to be met: "min. connection interval ≤ Max. connection interval"
(34)	<b>AT+ADVPATTERNnnnnnffff</b>	Set LED advertising pattern (Hex), where n = time when LED on, f = time when LED off e.g. 0x0064 (min. 100ms) 0x1388 (Max. 5000ms), 0x00000000 (off) 0xFFFFFFFF (on)
(35)	<b>AT+CONNECTPATTERNnnnnnffff</b>	Set LED connecting pattern (Hex), where n = time when LED on, f = time when LED off e.g. 0x0064 (min. 100ms) 0x1388 (Max. 5000ms) 0x00000000 (off) 0xFFFFFFFF (on)

No.	Command	Description
(36)	<b>AT+SERIALNO</b> nnnnnnnn	Set serial number e.g. AB000001, fixed 8-character length
(37)	<b>AT+RESPONSEDIS</b>	Disable response when sending “write” command
(38)	<b>AT+RESPONSEEN</b>	Enable response when sending “write” command
(39)	<b>AT+DISCONNECT</b>	Terminate the connection
(40)	<b>AT+DEFAULT</b>	Back to default
(42)	<b>AT+SETGPIO</b> nnHIGH	Setup GPIO number p0.nn to high, where “nn” is 02, 03, 11, 20 <b>(Ascii)</b>
(43)	<b>AT+SETGPIO</b> nnLOW	Setup GPIO number p0.nn to low, where “nn” is 02, 03, 11, 20 <b>(Ascii)</b>
(44)	<b>AT+SETGPIO</b> nnOFF	Setup GPIO number p0.nn to unused, where “nn” is 02, 03, 11, 20 <b>(Ascii)</b>
(45)	<b>AT+MACADDR</b> nnnnnnnnnnnnnn	Set IC MAC address, when n is <b>HEX</b> . Written order is from MSB byte to LSB byte.

## 2.2.2. “Read” Commands

No.	Command	Description
(1)	<b>AT?NAME</b>	To retrieve device name
(2)	<b>AT?VERSION</b>	To retrieve firmware version
(3)	<b>AT?MACADDR</b>	To retrieve IC MAC address
(4)	<b>AT?BAUDRATE</b>	To retrieve current UART baud rate
(5)	<b>AT?FLOWCONTROL</b>	To retrieve UART status of flow control
(6)	<b>AT?TXPOWER</b>	To retrieve RF TX power
(7)	<b>AT?XTAL</b>	To retrieve status of oscillator
(8)	<b>AT?CONNECTINDICATOR</b>	To retrieve logic of pin for BT-connecting indicator
(9)	<b>AT?PHYMODE</b>	To retrieve status of PHY mode
(10)	<b>AT?WAKEUP</b>	To retrieve logic of wake-up pin
(11)	<b>AT?ADVTIME</b>	To retrieve advertising time (Hex)
(12)	<b>AT?DCDC</b>	To retrieve DC to DC converter status
(13)	<b>AT?CONNECTINTERVALMODE</b>	To retrieve status of connection interval mode
(14)	<b>AT?ADVPATTERN</b>	To retrieve LED advertising pattern (Hex)
(15)	<b>AT?CONNECTPATTERN</b>	To retrieve LED connecting pattern (Hex)
(16)	<b>AT?SERIALNO</b>	To retrieve serial number
(17)	<b>AT?ADCVALUE</b>	To retrieve 10bit ADC value
(18)	<b>AT?RESPONSE</b>	To retrieve status of response
(19)	<b>AT?ALLPARAMETERS</b>	To retrieve value of all parameters
(20)	<b>AT?CONNECTINTERVALTIME</b>	To retrieve value of connection interval time under Mode 2

## 2.2.3. Response (Default)

No.	Command	Response
(1)	AT?NAME	Raytac AT-UART (default)
(2)	AT?VERSION	e.g. version: 1.0
(3)	AT?MACADDR	e.g. D352BDE1E414
(4)	AT?BAUDRATE	0 baudrate9600 (default) (0 = 9600; 1 = 19200; 2 = 38400; 3 = 57600; 4 = 115200; 5 = 230400; 6 = 460800)
(5)	AT?FLOWCONTROL	0 flowcontrol dis (default) (0 = disabled; 1 = enabled)
(6)	AT?TXPOWER	0 txpower 4dbm (default) (0 = 4dBm; 1 = 0dBm; 2 = -4dBm; 3 = -8dBm, 4 = -20dBm)
(7)	AT?XTAL	0 xtal internal (default) (0 = internal; 1 = external, and XTAL = 32.768KHz oscillator)
(8)	AT?CONNECTINDICATOR	0 connect indicator low (default) (0 = output low; 1 = output high)
(9)	AT?PHYMODE	0 PHY mode 1Mbps (default) (0 = 1Mbps; 1 = 2Mbps)
(10)	AT?WAKEUP	0 wakeup low (default) (0 = low active; 1 = high active)
(11)	AT?ADVTIME	0000 (default: Hex, forever advertising with no timeout, tttt: 0x0000)
(12)	AT?DCDC	0 dcdc dis (default) (0 = disabled; 1 = enabled)
(13)	AT?CONNECTINTERVALMODE	0 connect interval mode 0 (default) (0 = <b>fixed</b> connection interval for iOS/Android APP usage 1 = <b>fixed</b> connection interval for nRF52832 Central usage 2 = Programmable connection interval for iOS/Android APP usage)
(14)	AT?ADVPATTERN	01F401F4 (default: Hex, 0.5sec on / 0.5sec off, nnnn: 0x01F4, ffff: 0x01F4)

No.	Command	Response
(15)	<b>AT?CONNECTPATTERN</b>	00c80708 (default: Hex, 0.2sec on / 1.8sec off, nnnn: 0x00c8, ffff: 0x0708)
(16)	<b>AT?SERIALNO</b>	Display “ no data! ” string (default)
(17)	<b>AT?ADCVALUE</b>	Value varies from input voltage
(18)	<b>AT?RESPONSE</b>	1 response en (default) (0 = disable response; 1 = enable response)
(19)	<b>AT?ALLPARAMETERS</b>	Display value of all parameters, separated by "0x0d0x0a"
(20)	<b>AT?CONNECTINTERVALTIME</b>	006400C8 (default: <b>Hex</b> , 100ms min. connection interval / 200ms Max. connection interval, ttttttt: 0x006400C8)

## 2.3. Default Info

No.	Description	Default
(1)	Device name	Raytac AT-UART
(2)	Base UUID	0x9E, 0xCA, 0xDC, 0x24, 0x0E, 0xE5, 0xA9, 0xE0 0x93, 0xF3, 0xA3, 0xB5, 0x00, 0x00, 0x40, 0x6E
(3)	Service UUID	0x0001 TX characteristic: 0x0003; RX characteristic: 0x0002
(4)	Baud rate	9600bps,n,8,1
(5)	Status of flow control	Disabled
(6)	RF TX power	+4dBm
(7)	32.768Khz oscillator	Using internal RC with 1000ms calibration time
(8)	Logic of BT connecting indicator	Output set as logic low when BT is connecting
(9)	PHY mode	1Mbps
(10)	Logic of wake-up pin	Set logic low to wake up in deep sleep
(11)	Advertising time	Forever advertising with no timeout
(12)	Status of DC-to-DC converter	Disabled
(13)	Connection interval mode	Set at min. 20ms and Max. 40ms for iOS/Android usage
(14)	Advertising LED pattern	0.5sec on / 0.5sec off
(15)	Connecting LED pattern	0.2sec on / 1.8secs off
(16)	Serial number	Display “ no data! ” string
(17)	ADC value	Value varies from input voltage between 0x0000 ~ 0x03FF (Hex).
(18)	State of response	Enabled
(19)	Programmable output GPIO	P0.02, P0.03, P0.11, P0.20 are unused

## 2.4. Pin Assignment

Pin No.	Name	Pin Function	Description
(1)	<b>GND</b>	Ground	The pad must be connected to a solid ground plane
(2)	<b>SWDCLK</b>	Digital input	Serial Wire debug clock input for debug and programming
(3)	<b>RESET</b>	Input	Active-low to enable hardware system RESET pin
(4)	<b>SWDIO</b>	Digital I/O	Serial Wire debug I/O for debug and programming
(5)	<b>P0.20</b>	Output / NC	Programmable output GPIO, NC when set unused
(6)	<b>Indicator</b>	Output / Logic	Output logic is selective about the action of BT connection
(7)	<b>Connecting or Adver. LED</b>	Output	Setting of LED pattern is changeable when it is active-low
(8)	<b>Wakeup</b>	Input / Logic	Output logic is selective about the action of wakeup from deep sleep
(9)	<b>UART PD</b>	Input	Active-high with internal pull-high to disable hardware UART interface. The default is disabled.
(10)	<b>GND</b>	Ground	The pad must be connected to a solid ground plane
(11)	<b>UART RTS</b>	Output	RTS, request to send
(12)	<b>UART TX</b>	Output	UART transmitter
(13)	<b>UART CTS</b>	Input	CTS, clear to send
(14)	<b>UART RX</b>	Input	UART receiver
(15)	<b>NC</b>	No function	Not connected when using internal RC (LFXO)
	<b>XL2</b>	Analog input	Connecting to 32.768KHz crystal when using external LFXO
(16)	<b>NC</b>	No function	Not connected when using internal RC (LFXO)
	<b>XL1</b>	Analog input	Connecting to 32.768KHz crystal when using external LFXO
(17)	<b>ADC</b>	Analog input	10bit resolution ADC is always on and update every 200ms
(18)	<b>GND</b>	Ground	The pad must be connected to a solid ground plane
(19)	<b>Flash Default</b>	Input	Active-low with internal pull-high for 0.48sec $\leq$ logic low $\leq$ 1sec and return to logic high, then system will back to default.
(20)	<b>VCC</b>	Power	Power-supply pin

<b>Pin No.</b>	<b>Name</b>	<b>Pin Function</b>	<b>Description</b>
(21)	<b>DEC4</b>	Power	1V3 regulator supply decoupling. Input from DC/DC converter. Output from 1V3 LDO
(22)	<b>DCC</b>	Power	DC/DC converter output pin
(23)	<b>NC</b>	No function	Not connected
(24)	<b>NC</b>	No function	Not connected
(25)	<b>NC</b>	No function	Not connected
(26)	<b>P0.02</b>	Output / NC	Programmable output GPIO, NC when set unused
(27)	<b>P0.03</b>	Output / NC	Programmable output GPIO, NC when set unused
(28)	<b>P0.11</b>	Output / NC	Programmable output GPIO, NC when set unused
(29)	<b>GND</b>	Ground	The pad must be connected to a solid ground plane

## 3. How to Control via External MCU

### 3.1. How to Send AT Commands

- **When BT is NOT connected, for ALL commands**

1. Output low to [UART PD](#) pin to enable UART interface. Please keep it LOW during the whole time when sending AT commands.
2. Send any AT commands you want. **Please wait for at least 250 ms between sending each command.**

We recommend sending corresponding “Read” command ([section 2.2.2](#)) right after the delay to know whether the writing is successful before moving on to step 3 to save your settings.

*Please prolong the delay (over 250 ms) when writing or/and reading is not successful.*

3. **Send command “ AT+RESET ” (not HW reset) to save all your settings.**
4. Output high or NC to [UART PD](#) pin to turn off UART interface.

- **When BT is connected**

**Write: AT+DISCONNECT, AT+SLEEP, AT+SETGPIOnnHIGH,  
AT+SETGPIOnnLOW, AT+SETGPIOnnOFF**

**Read: AT?ADCVALUE**

1. Output low to [UART PD](#) pin to enable UART interface. Please keep it LOW during the whole time when sending AT commands.
2. Output low to [flash default](#) pin to enable the module to receive AT commands when BT is connected. Please keep it LOW during the whole time when sending AT commands.
3. Send “AT?ADCVALUE” or “AT+DISCONNECT” or “AT+SLEEP” or “AT+SETGPIOnnHIGH” or “AT+SETGPIOnnLOW” or “AT+SETGPIOnnOFF”.
4. Output high or NC to [UART PD](#) pin to turn off UART interface.

## 3.2. How to Transmit Data

**\* Only when BT is connected \***

1. Output low to **UART PD** pin to enable UART interface. Please keep it LOW during the whole time when transmitting data.
2. Output high or NC to **UART PD** pin to turn off UART interface.


## 3.3. How to Return to Flashed Default Setting

**\* Only when BT is NOT connected \***

**\* Note that default baud rate is “9600bps,n,8,1”. For other default, please check [“2.3 Default Info”](#)**

### ● Use Hardware Method

1. Read **indicator** pin first to check if BT is *NOT* in connection.
2. Output a low pulse to **flash default** pin, then system will return to default setting.

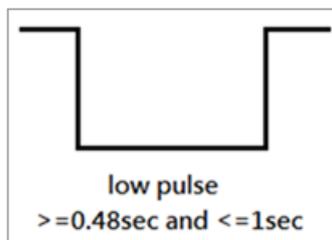

### ● Use Software method

1. Output low to **UART PD** pin to enable UART interface. Please keep it LOW during the whole time when sending AT commands.
2. Send command “AT+DEFAULT”, then system will return to default setting.

# 4. Test Report

All testing is done under **PHY mode at 1M bps.**

## 4.1. Current Test

DC/DC	Logic of UART PD pin	Advertising Current	Connected Current
Disable	High	1.10 mA	0.50 mA
	Low	3.30 mA	2.75 mA
Enable	High	0.60 mA	0.27 mA
	Low	1.70 mA	1.40 mA

	Logic of UART PD pin	Sleep Current
Sleep Mode	High	3 uA
	Low	3 uA

## 4.2. Throughput Test

Here **D.L.** means “**Data Length**” and **D.I.** means “**Data Interval**” in the table.

- MCU → Peripheral (MDBT42V-AT/MDBT42V-PAT) → Central → Console

Central Connection Interval	Peripheral Connection Interval	Baud Rate	Flow Control	MCU D.L. (bytes)	MCU D.I. (ms)	Total D.L. (bytes)	Total Trans. Time (sec)	Data Rate (k-bytes/sec)
min = 20ms Max = 75ms	min = 20ms Max = 40ms	9600	X	64	60	262152	273	0.96
				244	250	999432	1,042	
			V	244	250	999432	1,042	
min = 20ms Max = 75ms	min = 20ms Max = 40ms	115200	X	64	6	262152	28	9.3
				244	25	999432	106	9.4
			V	244	25	999432	106	9.4
min = 20ms Max = 75ms	min = 20ms Max = 40ms	460800	X	244	20	999432	82	12.1
			V					
min = Max = 8ms	min = Max = 8ms	9600	X	64	60	262152	273	0.96
				244	250	999432	1,042	
			V	244	250	999432	1,042	
min = Max = 8ms	min = Max = 8ms	115200	X	64	6	262152	28	9.3
				244	25	999432	106	9.4
			V	244	25	999432	106	9.4
min = Max = 8ms	min = Max = 8ms	460800	X	244	11	999432	46	21.7
			V					


● MCU → Central → Peripheral (MDBT42V-AT/MDBT42V-PAT) → Console

Central Connection Interval	Peripheral Connection Interval	Baud Rate	Flow Control	MCU D.L. (bytes)	MCU D.I. (ms)	Total D.L. (bytes)	Total Trans. Time (sec)	Data Rate (k-bytes/sec)
min = 20ms Max = 75ms	min = 20ms Max = 40ms	9600	X	64	60	262152	273	0.96
				244	250	999432	1,042	
			V	244	250	999432	1,042	
min = 20ms Max = 75ms	min = 20ms Max = 40ms	115200	X	64	6	262152	28	9.3
				244	25	999432	106	9.4
			V	244	25	999432	106	9.4
min = 20ms Max = 75ms	min = 20ms Max = 40ms	460800	X	244	15	999432	62	16.1
			V					
min = Max = 8ms	min = Max = 8ms	9600	X	64	60	262152	273	0.96
				244	250	999432	1,042	
			V	244	250	999432	1,042	
min = Max = 8ms	min = Max = 8ms	115200	X	64	6	262152	28	9.3
				244	25	999432	106	9.4
			V	244	25	999432	106	9.4
min = Max = 8ms	min = Max = 8ms	460800	X	244	11	999432	46	21.7
			V					

# 5. Product Dimension

## 5.1. PCB Dimensions & Pin Indication




### • MDBT42V-AT

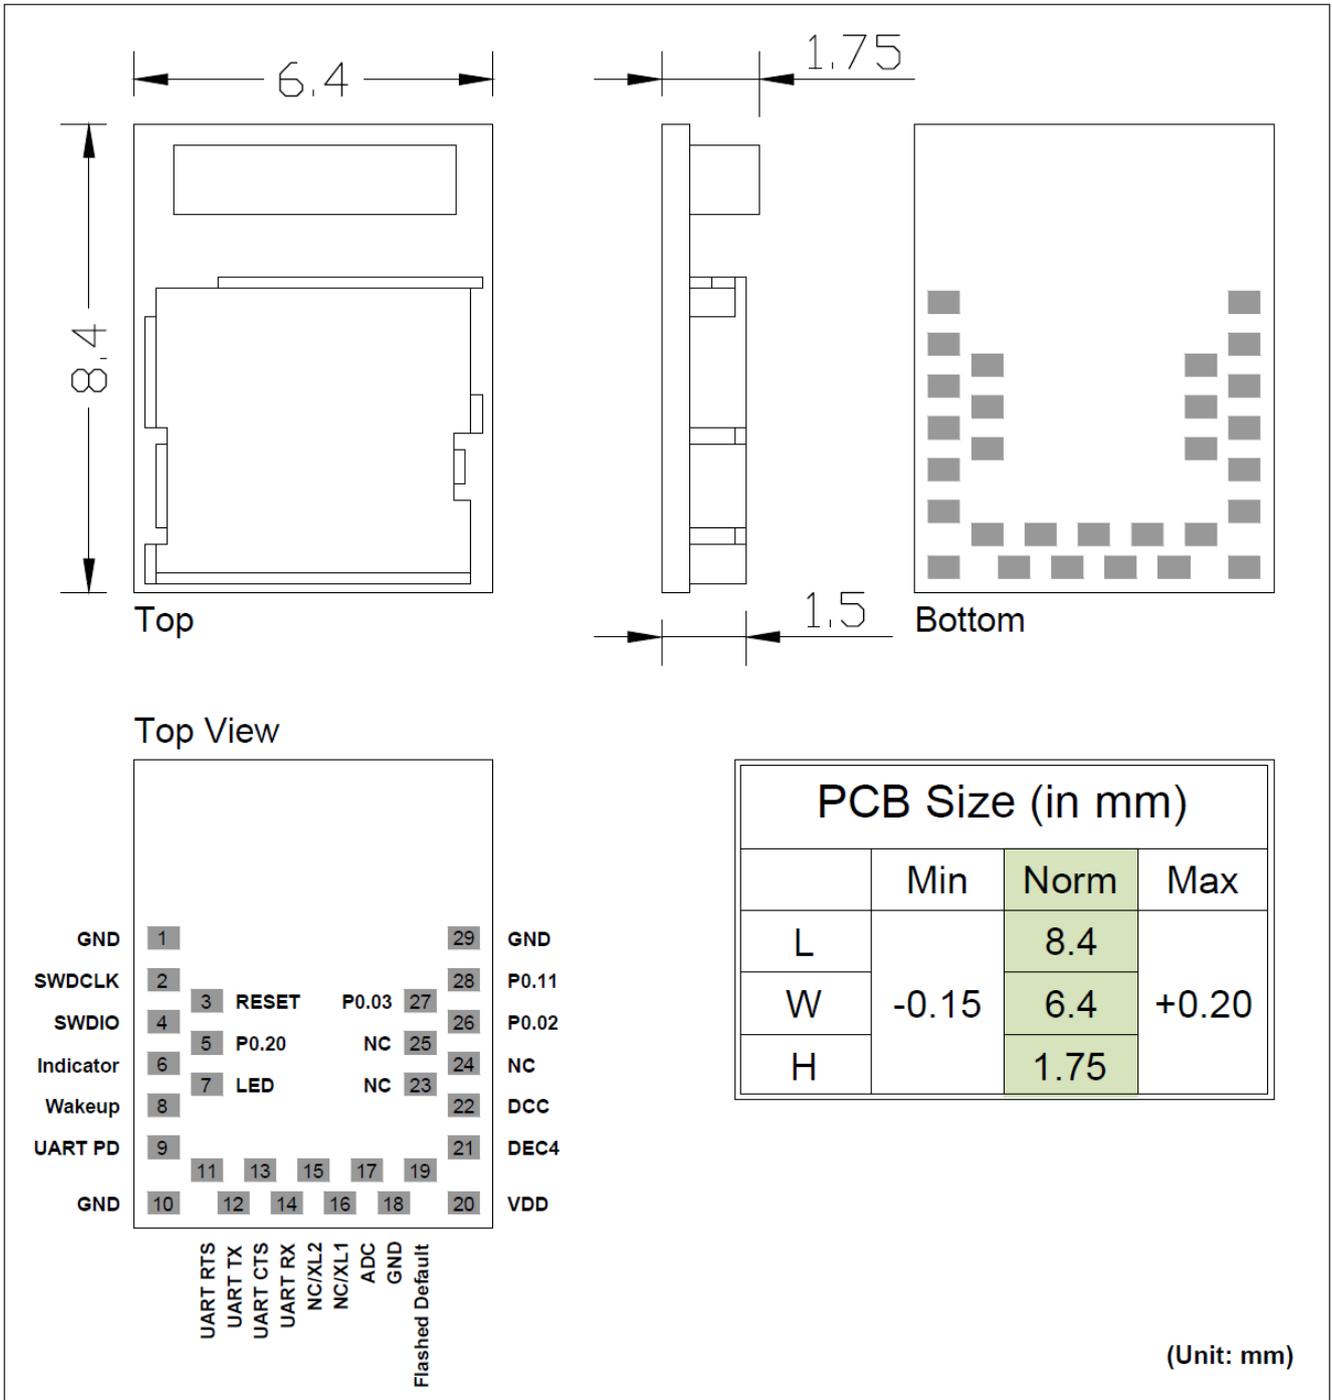



## 5.2. Recommended Layout of Solder Pad


*Graphs are all in Top View, Unit in mm.*

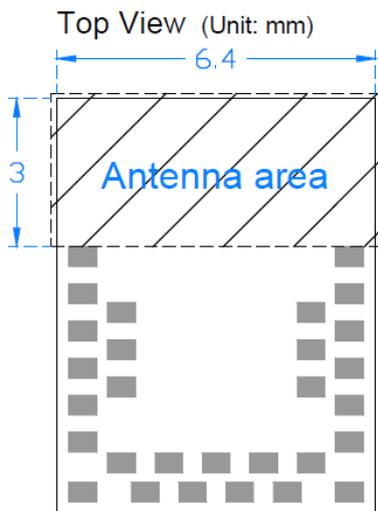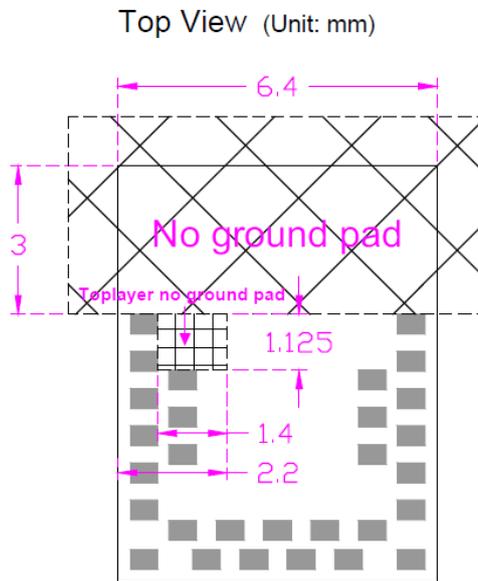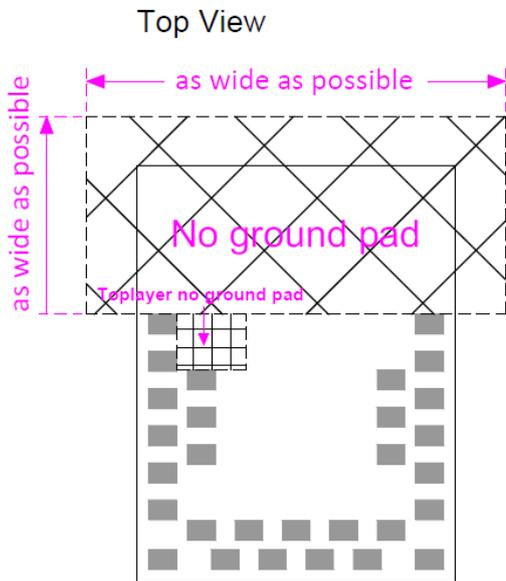

-  No ground pad (as wide as possible)
-  Toplayer no ground pad

-  Antenna area

Top View (Unit: mm)

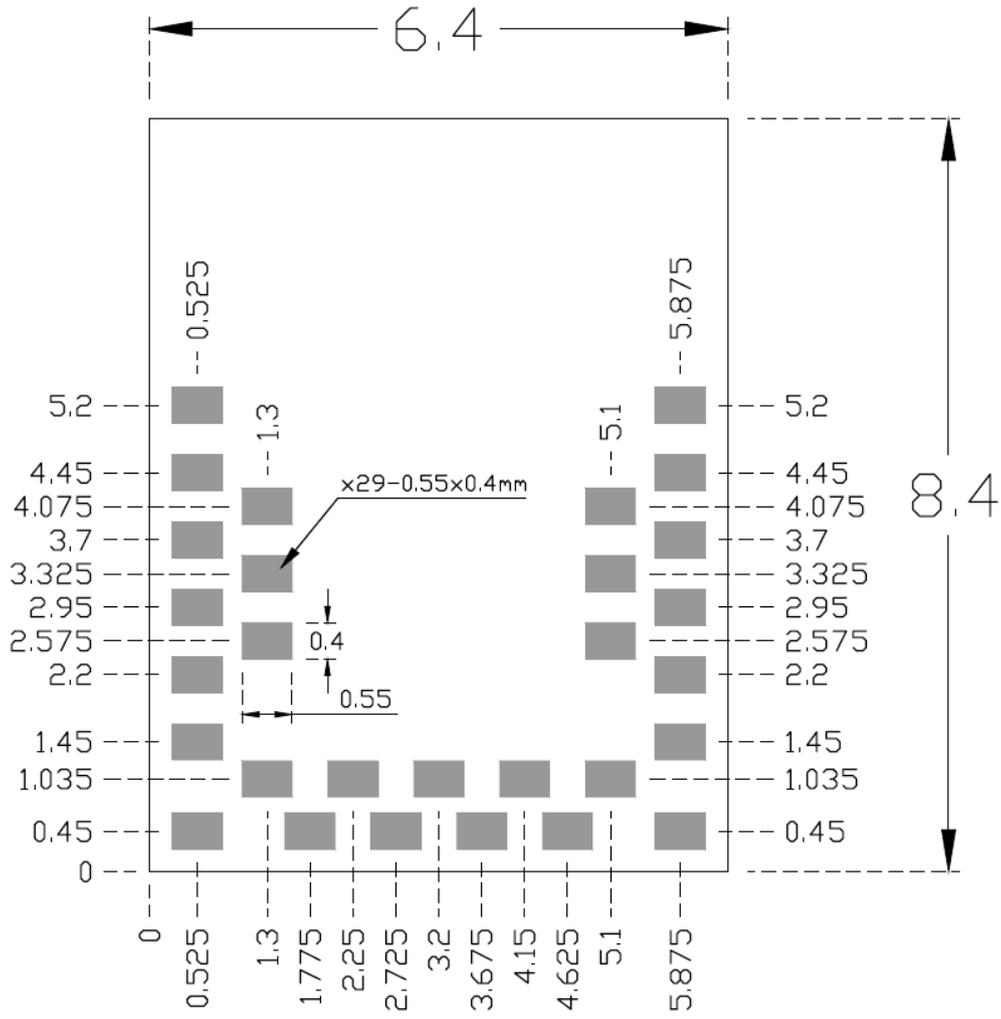


### 5.3. RF Layout Suggestion (aka Keep-Out Area)

Make sure to keep the “No Ground Pad” as wider as you can regardless of the size of your PCB.

No-Ground Pad should be included in the corresponding position of the antenna in **EACH LAYER**.


Place the module towards the edge of PCB to have better performance than placing it on the center.

Welcome to send us your layout in PDF for review at [service@raytac.com](mailto:service@raytac.com) or your contact at Raytac with title “Layout reviewing – Raytac model no. – YOUR company’s name”.

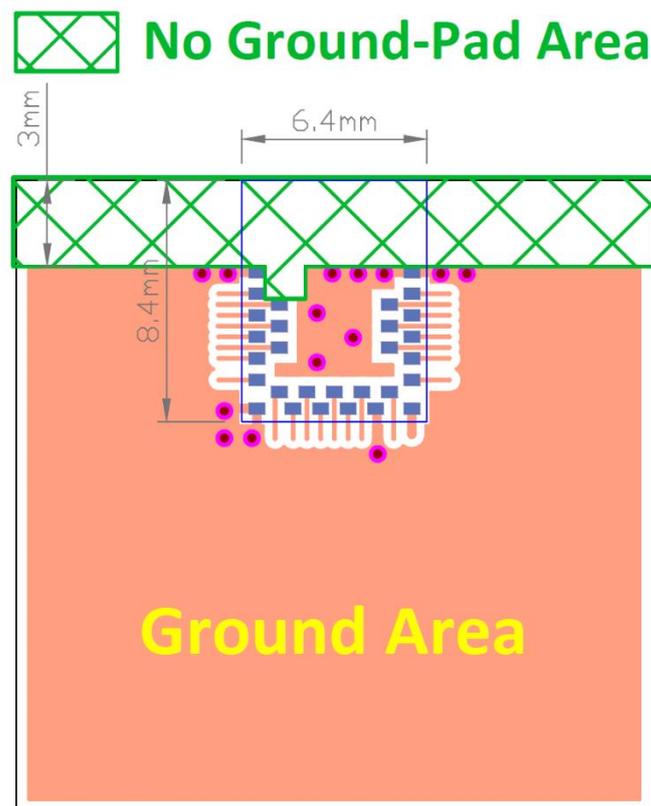


**Top View**

Please add via holes in GROUND area as many as possible, especially around the four corners.

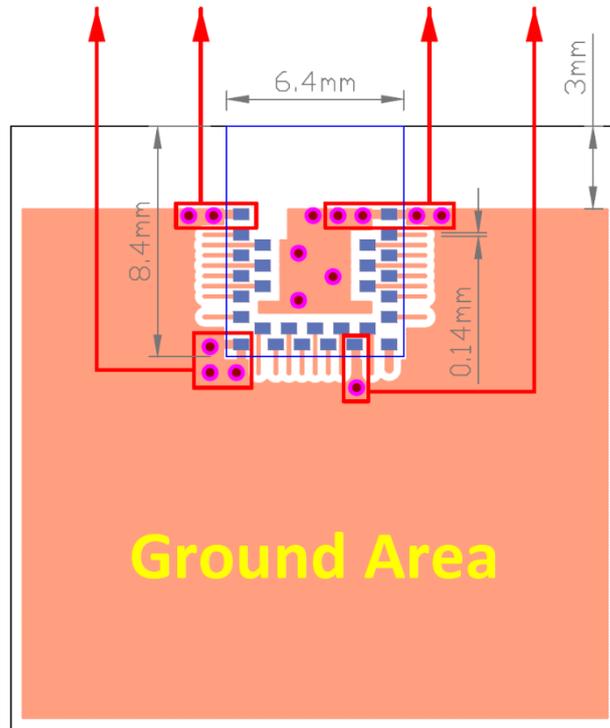

**Top View**


 **No Ground-Pad Area**

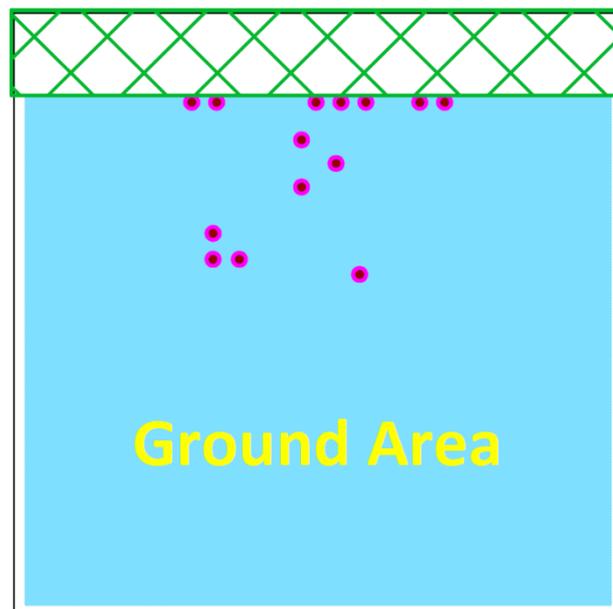


**Perspective View**

Examples of “**NOT RECOMMENDED**” layout

 where should be NO-GROUND area

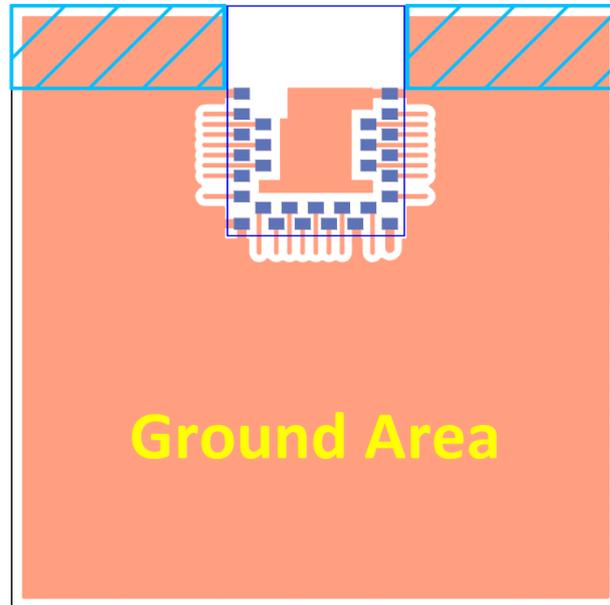

 where should be NO-GROUND area

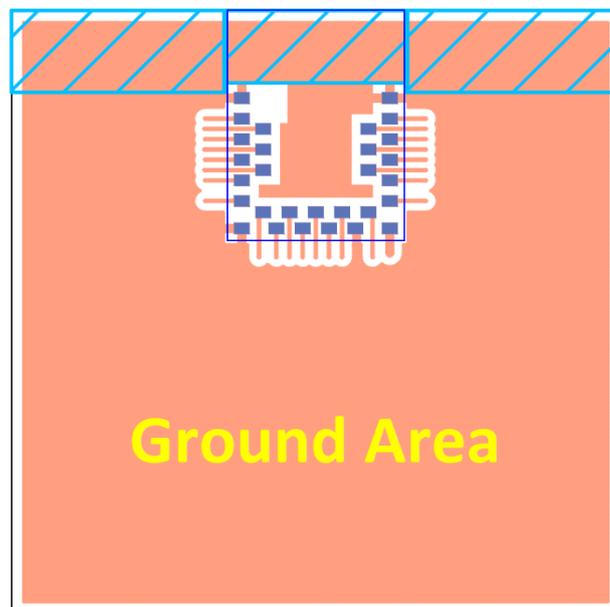

## 5.4. Footprint & Design Guide

Please visit “[Support](#)” page of our website to download. The package includes footprint, 2D/3D drawing, reflow graph and recommended spec for external 32.768khz.

## 6. Main Chip Solution

RF IC	Crystal Frequency
Nordic NRF52832	32MHZ

*32MHz crystal is already inside the module.*

## 7. Shipment Packaging Information

Model	Antenna	Photo
MDBT42V-AT	Chip/Ceramic	
MDBT42V-PAT	PCB/Printed	

- Unit Weight of Module:

MDBT42V-AT: 0.17g ( $\pm 0.02$ g) ; MDBT42V-PAT: 0.15g ( $\pm 0.02$ g)

- Packaging Type: Anti-Static tray or Tape & Reel.

	Tray	Tape & Reel (13")	Tape & Reel (7")
<b>MPQ (Min. Package Q'ty)</b>	160 pcs per tray	1,760 pcs per reel	640 pcs per reel
<b>Carton Contents (per carton)</b>	3,200 pcs	1,760 pcs	640 pcs
<b>Carton Dimension (L) x (W) x (H) cm</b>	37 x 21 x 13	37 x 36 x 6	37 x 36 x 6
<b>Gross Weight</b>	about 2.2 kgs	about 1.2 kgs	about 1 kg


## 7.1. Marking on Metal Shield

### 7.1.1. Label

Label contexts for date code 101 (starts from year 2021) and later.



For date code before 101.

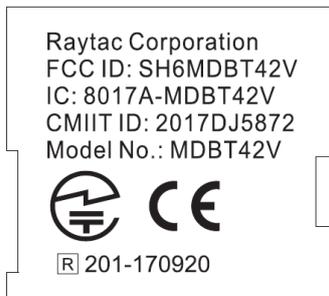


### 7.1.2. Dot Marking

Dot	Date Code	Photo
Yellow x 2	before 019	
Yellow x 1	019 and later (starts from 2020)	


## 7.2. Packaging Info

### 7.2.1. Tray Packaging

Anti-static tray is specifically designed for mass production. It can be used directly on SMT automatic machine.

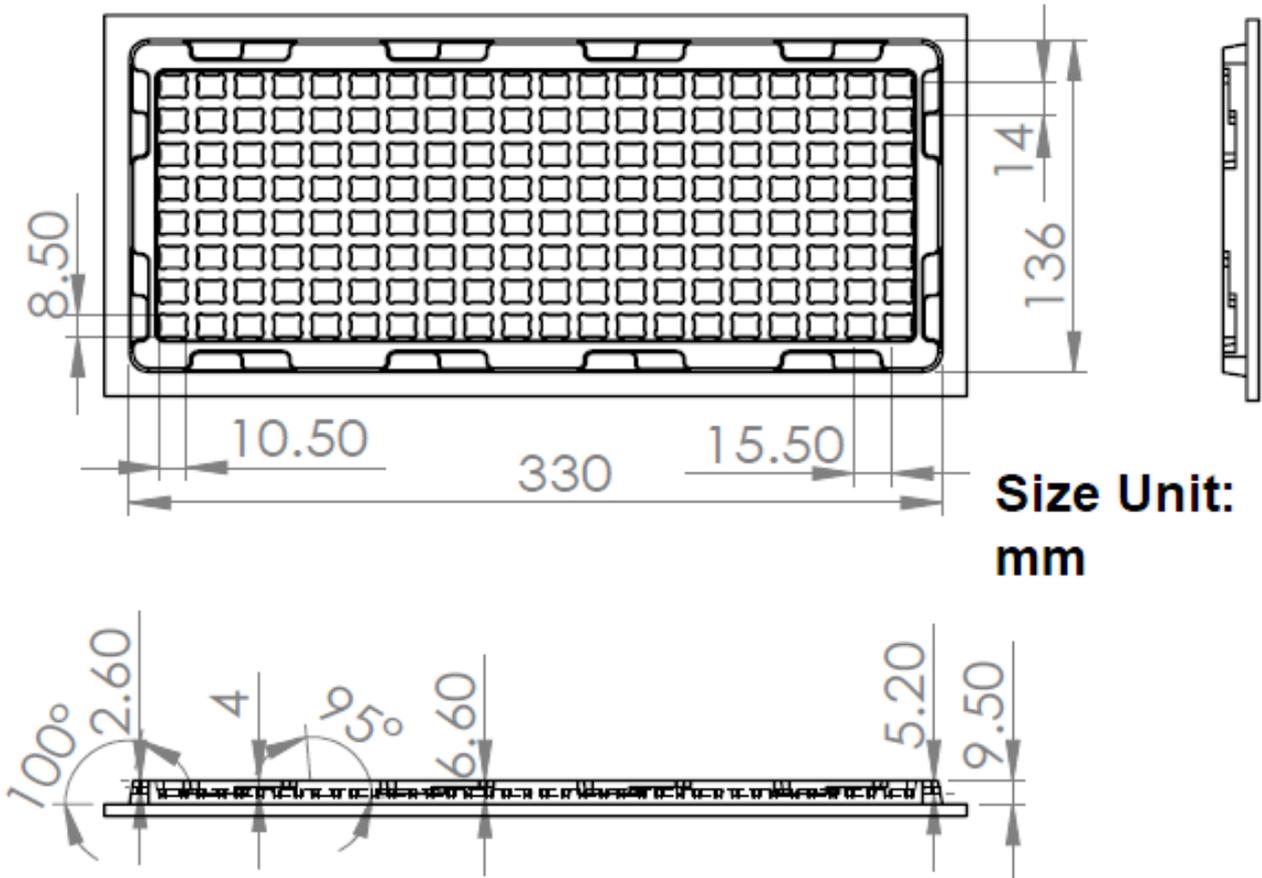

## 7.2.2. Tape & Reel Packaging

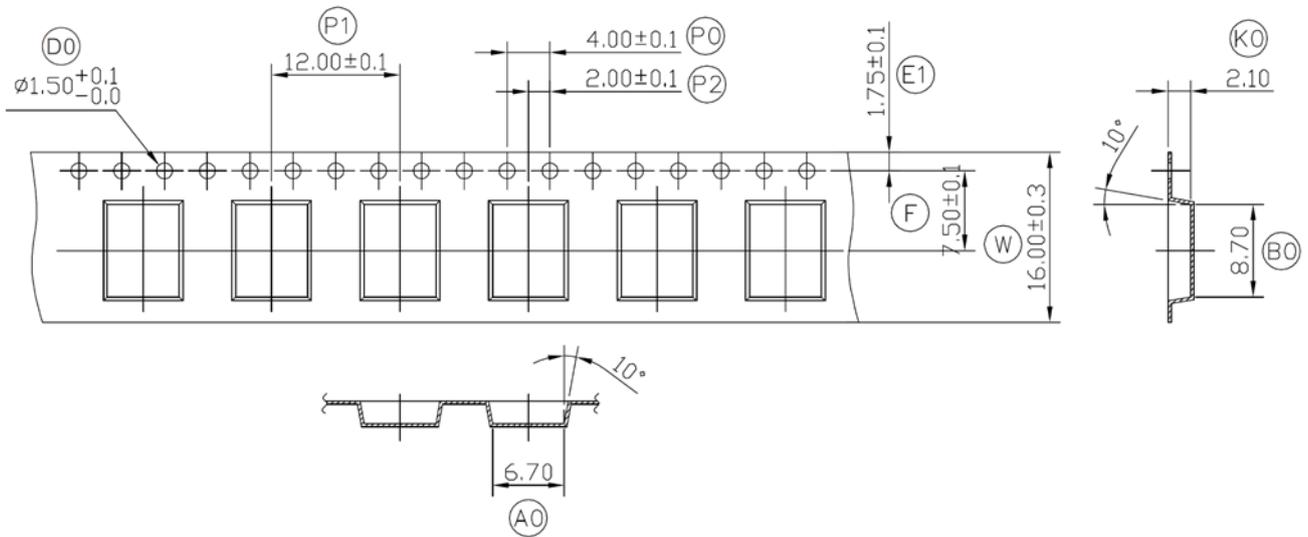

<b>W</b>	<b>16.00</b>	<b><math>\pm 0.30</math></b>
<b>P1</b>	<b>12.00</b>	<b><math>\pm 0.10</math></b>
<b>E1</b>	<b>1.75</b>	<b><math>\pm 0.10</math></b>
<b>F</b>	<b>7.50</b>	<b><math>\pm 0.10</math></b>
<b>D0</b>	<b>1.50</b>	<b><math>+0.1/-0</math></b>
<b>P0</b>	<b>4.00</b>	<b><math>\pm 0.10</math></b>
<b>P2</b>	<b>2.00</b>	<b><math>\pm 0.10</math></b>
<b>A0</b>	<b>6.70</b>	<b><math>\pm 0.10</math></b>
<b>B0</b>	<b>8.70</b>	<b><math>\pm 0.10</math></b>
<b>K0</b>	<b>2.10</b>	<b><math>\pm 0.10</math></b>
<b>T</b>	<b>0.30</b>	<b><math>\pm 0.05</math></b>

### 7.3. Order Code

Each model has two options of packaging. Please use following part no. when placing order to us.

Model	Tray	Tape & Reel
MDBT42V-AT	MD-240A2-S40	(13") MD-240A2-S40R
		(7") MD-240A2-S40R7
MDBT42V-PAT	MD-240A2-S41	(13") MD-240A2-S41R
		(7") MD-240A2-S41R7

	Tray	Tape & Reel (13")	Tape & Reel (7")
<b>MPQ (Min. Package Q'ty)</b>	160 pcs per tray	1,760 pcs per reel	640 pcs per reel
<b>Carton Contents (per carton)</b>	3,200 pcs	1,760 pcs	640 pcs
<b>Carton Dimension (L) x (W) x (H) cm</b>	37 x 21 x 13	37 x 36 x 6	37 x 36 x 6
<b>Gross Weight</b>	about 2.2 kgs	about 1.2 kgs	about 1 kg

## 8. Specification

Any technical spec shall refer to Nordic's official documents as final reference. Contents below are from "[nRF52832 Product Specification v1.8](#)", please click to download full spec.

### 8.1. Absolute Maximum Ratings

	Min.	Max.	Unit
<b>Supply voltages</b>			
VDD	-0.3	+3.9	V
VSS		0	V
<b>I/O pin voltage</b>			
V <sub>I/O</sub> , VDD ≤ 3.6 V	-0.3	VDD + 0.3 V	V
V <sub>I/O</sub> , VDD > 3.6 V	-0.3	3.9 V	V
<b>NFC antenna pin current</b>			
I <sub>NFC1/2</sub>		80	mA
<b>Radio</b>			
RF input level		10	dBm
<b>Flash memory</b>			
Endurance	10 000		Write/erase cycles
Retention	10 years at 40°C		
<b>Environmental WLCSP, 3.0×3.2 mm package</b>			
Storage temperature	-40	+125	°C
MSL		1	
ESD HBM (human body model)		2	kV
ESD CDM (charged device model)		500	V

### 8.2. Operation Conditions

Symbol	Parameter	Min.	Nom.	Max.	Units
VDD	Supply voltage, independent of DCDC enable	1.7	3.0	3.6	V
t <sub>R_VDD</sub>	Supply rise time (0 V to 1.7 V)			60	ms
TA	Operating temperature	-40	25	85	°C

**Important:** The on-chip power-on set circuitry may not function properly for rise times longer than the specified maximum.

## 8.3. Electrical Specifications

### 8.3.1. General Radio Characteristics

Symbol	Description	Min.	Typ.	Max.	Units
$f_{OP}$	Operating frequencies	2360		2500	MHz
$f_{PLL,PROG,RES}$	PLL programming resolution		2		kHz
$f_{PLL,CH,SP}$	PLL channel spacing		1		MHz
$f_{DELTA,1M}$	Frequency deviation @ 1 Mbps		$\pm 170$		kHz
$f_{DELTA,BLE,1M}$	Frequency deviation @ BLE 1 Mbps		$\pm 250$		kHz
$f_{DELTA,2M}$	Frequency deviation @ 2 Mbps		$\pm 320$		kHz
$f_{DELTA,BLE,2M}$	Frequency deviation @ BLE 2 Mbps		$\pm 500$		kHz
$f_{sk_{SPS}}$	On-the-air data rate	1		2	Mbps

### 8.3.2. Radio Current Consumption (Transmitter)

Symbol	Description	Min.	Typ.	Max.	Units
$I_{TX,PLUS4dBm,DCDC}$	TX only run current (DCDC, 3V) $P_{RF} = +4$ dBm		7.5		mA
$I_{TX,PLUS4dBm}$	TX only run current $P_{RF} = +4$ dBm		16.6		mA
$I_{TX,0dBm,DCDC}$	TX only run current (DCDC, 3V) $P_{RF} = 0$ dBm		5.3		mA
$I_{TX,0dBm}$	TX only run current $P_{RF} = 0$ dBm		11.6		mA
$I_{TX,MINUS4dBm,DCDC}$	TX only run current DCDC, 3V $P_{RF} = -4$ dBm		4.2		mA
$I_{TX,MINUS4dBm}$	TX only run current $P_{RF} = -4$ dBm		9.3		mA
$I_{TX,MINUS8dBm,DCDC}$	TX only run current DCDC, 3V $P_{RF} = -8$ dBm		3.8		mA
$I_{TX,MINUS8dBm}$	TX only run current $P_{RF} = -8$ dBm		8.4		mA
$I_{TX,MINUS12dBm,DCDC}$	TX only run current DCDC, 3V $P_{RF} = -12$ dBm		3.5		mA
$I_{TX,MINUS12dBm}$	TX only run current $P_{RF} = -12$ dBm		7.7		mA
$I_{TX,MINUS16dBm,DCDC}$	TX only run current DCDC, 3V $P_{RF} = -16$ dBm		3.3		mA
$I_{TX,MINUS16dBm}$	TX only run current $P_{RF} = -16$ dBm		7.3		mA
$I_{TX,MINUS20dBm,DCDC}$	TX only run current DCDC, 3V $P_{RF} = -20$ dBm		3.2		mA
$I_{TX,MINUS20dBm}$	TX only run current $P_{RF} = -20$ dBm		7.0		mA
$I_{TX,MINUS40dBm,DCDC}$	TX only run current DCDC, 3V $P_{RF} = -40$ dBm		2.7		mA
$I_{TX,MINUS40dBm}$	TX only run current $P_{RF} = -40$ dBm		5.9		mA
$I_{START,TX,DCDC}$	TX start-up current DCDC, 3V, $P_{RF} = 4$ dBm		4.0		mA
$I_{START,TX}$	TX start-up current, $P_{RF} = 4$ dBm		8.8		mA

### 8.3.3. Radio Current Consumption (Receiver)

Symbol	Description	Min.	Typ.	Max.	Units
$I_{RX,1M,DCDC}$	RX only run current (DCDC, 3V) 1Msps / 1Msps BLE		5.4		mA
$I_{RX,1M}$	RX only run current 1Msps / 1Msps BLE		11.7		mA
$I_{RX,2M,DCDC}$	RX only run current (DCDC, 3V) 2Msps / 2Msps BLE		5.8		mA
$I_{RX,2M}$	RX only run current 2Msps / 2Msps BLE		12.9		mA
$I_{START,RX,DCDC}$	RX start-up current (DCDC 3V)		3.5		mA
$I_{START,RX,LDO}$	RX start-up current (LDO 3V)		7.5		mA

### 8.3.4. Transmitter Specification

Symbol	Description	Min.	Typ.	Max.	Units
$P_{RF}$	Maximum output power		4	6	dBm
$P_{RFC}$	RF power control range		24		dB
$P_{RFCR}$	RF power accuracy			±4	dB
$P_{RF1,1}$	1st Adjacent Channel Transmit Power 1 MHz (1 Msps Nordic proprietary mode)		-25		dBc
$P_{RF2,1}$	2nd Adjacent Channel Transmit Power 2 MHz (1 Msps Nordic proprietary mode)		-50		dBc
$P_{RF1,2}$	1st Adjacent Channel Transmit Power 2 MHz (2 Msps Nordic proprietary mode)		-25		dBc
$P_{RF2,2}$	2nd Adjacent Channel Transmit Power 4 MHz (2 Msps Nordic proprietary mode)		-50		dBc
$P_{RF1,2,BLE}$	1st Adjacent Channel Transmit Power 2 MHz (2 Msps BLE mode)		-20		dBc
$P_{RF2,2,BLE}$	2nd Adjacent Channel Transmit Power 4 MHz (2 Msps BLE mode)		-50		dBc

### 8.3.5. Receiver Operation

Symbol	Description	Min.	Typ.	Max.	Units
$P_{RX,MAX}$	Maximum received signal strength at < 0.1% BER		0		dBm
$P_{SENS,IT,1M}$	Sensitivity, 1Msps nRF mode <sup>1</sup>		-93		dBm
$P_{SENS,IT,SP,1M,BLE}$	Sensitivity, 1Msps BLE ideal transmitter, ≤37 bytes BER=1E-3 <sup>2</sup>		-96		dBm
$P_{SENS,IT,LP,1M,BLE}$	Sensitivity, 1Msps BLE ideal transmitter ≥128 bytes BER=1E-4 <sup>3</sup>		-95		dBm
$P_{SENS,IT,2M}$	Sensitivity, 2Msps nRF mode <sup>4</sup>		-89		dBm

1. Typical sensitivity applies when ADDR0 is used for receiver address correlation. When ADDR [1...7] are used for receiver address correlation, the typical sensitivity for this mode is degraded by 3dB.
2. As defined in the Bluetooth Core Specification v4.0 Volume 6: Core System Package (Low Energy Controller Volume).
3. Equivalent BER limit < 10E-04.
4. Same as remark 1.

Symbol	Description	Min.	Typ.	Max.	Units
P <sub>SENS,DT,SP,2M,BLE</sub>	Sensitivity, 2Msps BLE dirty transmitter, Packet length <=37bytes		-93		dBm
P <sub>SENS,IT,LP,2M,BLE</sub>	Sensitivity, 2Msps BLE ideal transmitter >= 128bytes		-92		dBm
P <sub>SENS,DT,LP,2M,BLE</sub>	Sensitivity, 2Msps BLE dirty transmitter, Packet length >= 128bytes		-92		dBm

### 8.3.6. RX Selectivity

Symbol	Description	Min.	Typ.	Max.	Units
C/I <sub>1M,co-channel</sub>	1Msps mode, Co-Channel interference		9		dB
C/I <sub>1M,-1MHz</sub>	1 Msps mode, Adjacent (-1 MHz) interference		-2		dB
C/I <sub>1M,+1MHz</sub>	1 Msps mode, Adjacent (+1 MHz) interference		-10		dB
C/I <sub>1M,-2MHz</sub>	1 Msps mode, Adjacent (-2 MHz) interference		-19		dB
C/I <sub>1M,+2MHz</sub>	1 Msps mode, Adjacent (+2 MHz) interference		-42		dB
C/I <sub>1M,-3MHz</sub>	1 Msps mode, Adjacent (-3 MHz) interference		-38		dB
C/I <sub>1M,+3MHz</sub>	1 Msps mode, Adjacent (+3 MHz) interference		-48		dB
C/I <sub>1M,±6MHz</sub>	1 Msps mode, Adjacent (≥6 MHz) interference		-50		dB
C/I <sub>1MBLE,co-channel</sub>	1 Msps BLE mode, Co-Channel interference		6		dB
C/I <sub>1MBLE,-1MHz</sub>	1 Msps BLE mode, Adjacent (-1 MHz) interference		-2		dB
C/I <sub>1MBLE,+1MHz</sub>	1 Msps BLE mode, Adjacent (+1 MHz) interference		-9		dB
C/I <sub>1MBLE,-2MHz</sub>	1 Msps BLE mode, Adjacent (-2 MHz) interference		-22		dB
C/I <sub>1MBLE,+2MHz</sub>	1 Msps BLE mode, Adjacent (+2 MHz) interference		-46		dB
C/I <sub>1MBLE,&gt;3MHz</sub>	1 Msps BLE mode, Adjacent (≥3 MHz) interference		-50		dB
C/I <sub>1MBLE,image</sub>	Image frequency Interference		-22		dB
C/I <sub>1MBLE,image,1MHz</sub>	Adjacent (1 MHz) interference to in-band image frequency		-35		dB
C/I <sub>1MBLE,image</sub>	Image frequency Interference		-22		dB
C/I <sub>1MBLE,image,1MHz</sub>	Adjacent (1 MHz) interference to in-band image frequency		-35		dB
C/I <sub>2M,co-channel</sub>	2Msps mode, Co-Channel interference		10		dB
C/I <sub>2M,-2MHz</sub>	2 Msps mode, Adjacent (-2 MHz) interference		6		dB
C/I <sub>2M,+2MHz</sub>	2 Msps mode, Adjacent (+2 MHz) interference		-14		dB
C/I <sub>2M,-4MHz</sub>	2 Msps mode, Adjacent (-4 MHz) interference		-20		dB
C/I <sub>2M,+4MHz</sub>	2 Msps mode, Adjacent (+4 MHz) interference		-44		dB
C/I <sub>2M,-6MHz</sub>	2 Msps mode, Adjacent (-6 MHz) interference		-42		dB
C/I <sub>2M,+6MHz</sub>	2 Msps mode, Adjacent (+6 MHz) interference		-47		dB
C/I <sub>2M,≥12MHz</sub>	2 Msps mode, Adjacent (≥12 MHz) interference		-52		dB
C/I <sub>2MBLE,co-channel</sub>	2 Msps BLE mode, Co-Channel interference		7		dB
C/I <sub>2MBLE,±2MHz</sub>	2 Msps BLE mode, Adjacent (±2 MHz) interference		0		dB
C/I <sub>2MBLE,±4MHz</sub>	2 Msps BLE mode, Adjacent (±4 MHz) interference		-47		dB
C/I <sub>2MBLE,≥6MHz</sub>	2 Msps BLE mode, Adjacent (≥6 MHz) interference		-49		dB
C/I <sub>2MBLE,image</sub>	Image frequency Interference		-21		dB
C/I <sub>2MBLE,image, 2MHz</sub>	Adjacent (2 MHz) interference to in-band image frequency		-36		dB

Remark: Wanted signal level at PIN = -67 dBm. One interferer is used, having equal modulation as the wanted signal. The input power of the interferer where the sensitivity equals BER = 0.1% is presented.

## 8.3.7. RX Intermodulation

Symbol	Description	Min.	Typ.	Max.	Units
P <sub>IMD,1M</sub>	IMD performance, 1 Msps (3 MHz, 4 MHz, and 5 MHz offset)		-33		dBm
P <sub>IMD,1M,BLE</sub>	IMD performance, BLE 1 Msps (3 MHz, 4 MHz, and 5 MHz offset)		-30		dBm
P <sub>IMD,2M</sub>	IMD performance, 2 Msps (6 MHz, 8 MHz, and 10 MHz offset)		-33		dBm
P <sub>IMD,2M,BLE</sub>	IMD performance, BLE 2 Msps (6 MHz, 8 MHz, and 10 MHz offset)		-32		dBm

Remark: Wanted signal level at PIN = -64dBm. Two interferers with equal input power are used. The interferer closest in frequency is not modulated, the other interferer is modulated equal with the wanted signal. The input power of the interferers where the sensitivity equals BER = 0.1% is presented.

## 8.3.8. Radio Timing Parameters

Symbol	Description	Min.	Typ.	Max.	Units
t <sub>TXEN</sub>	Time between TXEN task and READY event after channel FREQUENCY configured		140		us
t <sub>TXEN,FAST</sub>	Time between TXEN task and READY event after channel FREQUENCY configured (Fast Mode)		40		us
t <sub>TXDISABLE</sub>	Time between DISABLE task and DISABLED event when the radio was in TX and mode is set to 1Msps		6		us
t <sub>TXDISABLE,2M</sub>	Time between DISABLE task and DISABLED event when the radio was in TX and mode is set to 2Msps		4		us
t <sub>RXEN</sub>	Time between the RXEN task and READY event after channel FREQUENCY configured in default mode		140		us
t <sub>RXEN,FAST</sub>	Time between the RXEN task and READY event after channel FREQUENCY configured in fast mode		40		us
t <sub>SWITCH</sub>	The minimum time taken to switch from RX to TX or TX to RX (channel FREQUENCY unchanged)		20		us
t <sub>RXDISABLE</sub>	Time between DISABLE task and DISABLED event when the radio was in RX		0		us
t <sub>TXCHAIN</sub>	TX chain delay		0.6		us
t <sub>RXCHAIN</sub>	RX chain delay		9.4		us
t <sub>RXCHAIN,2M</sub>	RX chain delay in 2Msps mode		5		us

## 8.3.9. RSSI Specifications

Symbol	Description	Min.	Typ.	Max.	Units
RSSI <sub>ACC</sub>	RSSI Accuracy Valid range -90 to -20 dBm		±2		dB
RSSI <sub>RESOLUTION</sub>	RSSI resolution		1		dB
RSSI <sub>PERIOD</sub>	Sample period		0.25		us

## 8.3.10. CPU

Symbol	Description	Min.	Typ.	Max.	Units
$W_{FLASH}$	CPU wait states, running from flash, cache disabled	0		2	
$W_{FLASHCACHE}$	CPU wait states, running from flash, cache enabled	0		3	
$W_{RAM}$	CPU wait states, running from RAM			0	
$I_{DDFLASHCACHE}$	CPU current, running from flash, cache enabled, LDO		7.4		mA
$I_{DDFLASHCACHEDCDC}$	CPU current, running from flash, cache enabled, DCDC 3V		3.7		mA
$I_{DDFLASH}$	CPU current, running from flash, cache disabled, LDO		8.0		mA
$I_{DDFLASHDCDC}$	CPU current, running from flash, cache disabled, DCDC 3V		3.9		mA
$I_{DDRAM}$	CPU current, running from RAM, LDO		6.7		mA
$I_{DDRAMDCDC}$	CPU current, running from RAM, DCDC 3V		3.3		mA
$I_{DDFLASH/MHz}$	CPU efficiency, running from flash, cache enabled, LDO		125		$\mu A / MHz$
$I_{DDFLASHDCDC/MHz}$	CPU efficiency, running from flash, cache enabled, DCDC 3V		58		$\mu A / MHz$
$CM_{FLASH}$	CoreMark <sup>5</sup> , running from flash, cache enabled		215		CoreM
$CM_{FLASH/MHz}$	CoreMark per MHz, running from flash, cache enabled		3.36		CoreM / MHz
$CM_{FLASH/mA}$	CoreMark per mA, running from flash, cache enabled, DCDC 3V		58		CoreM / mA

## 8.3.11. Power Management




Symbol	Description	Min.	Typ.	Max.	Units
$I_{ON\_RAMOFF\_EVENT}$	System ON, No RAM retention, Wake on any event		1.2		$\mu A$
$I_{ON\_RAMON\_EVENT}$	System ON, Full RAM retention, Wake on any event		1.5		$\mu A$
$I_{ON\_RAMOFF\_RTC}$	System ON, No RAM retention, Wake on RTC		1.9		$\mu A$
$I_{OFF\_RAMOFF\_RESET}$	System OFF, No RAM retention, Wake on reset		0.3		$\mu A$
$I_{OFF\_RAMOFF\_GPIO}$	System OFF, No RAM retention, Wake on GPIO		0.3		$\mu A$
$I_{OFF\_RAMOFF\_LPCOMP}$	System OFF, No RAM retention, Wake on LPCOMP		1.9		$\mu A$
$I_{OFF\_RAMOFF\_NFC}$	System OFF, No RAM retention, Wake on NFC field		0.7		$\mu A$
$I_{OFF\_RAMON\_RESET}$	System OFF, Full 64 kB RAM retention, Wake on reset		0.7		$\mu A$

# 9. Antenna

## 9.1. MDBT42V

### Test Result


Frequency (MHz)	2400	2410	2420	2430	2440	2450	2460	2470	2480	2490	2500
Gain (dBi)	-1.26	-1.12	-1.13	-1.29	-1.55	-1.89	-2.32	-2.81	-3.39	-3.88	-4.59
Peak EIRP (dBm)	-1.26	-1.12	-1.13	-1.29	-1.55	-1.89	-2.32	-2.81	-3.39	-3.88	-4.59
Directivity (dBi)	4.81	4.87	4.91	4.96	4.99	5.01	4.99	4.98	4.92	4.88	4.95

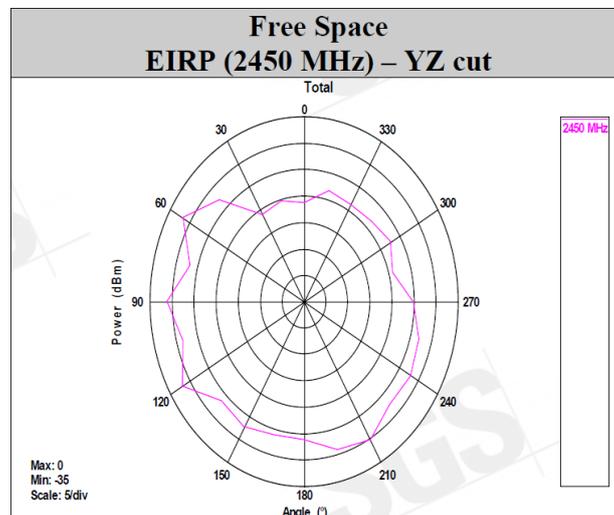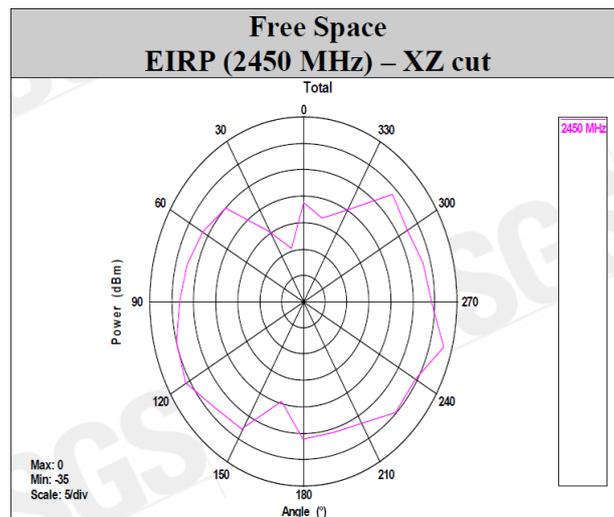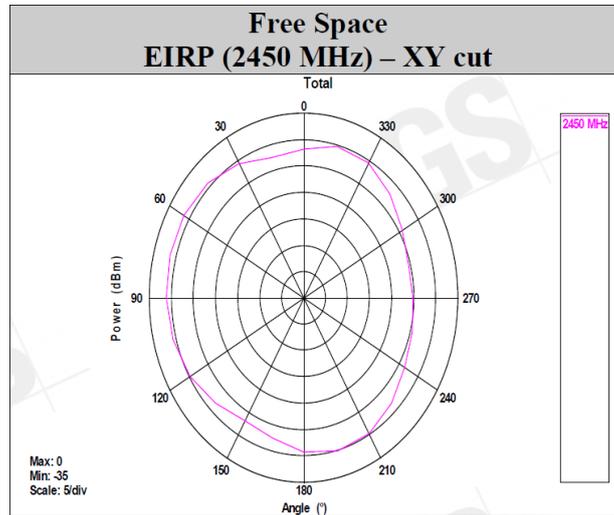

## 9.2. MDBT42V-P

### Test Result

Frequency (MHz)	2400	2410	2420	2430	2440	2450	2460	2470	2480	2490	2500
Gain (dBi)	-3.85	-3.81	-3.92	-4.00	-4.07	-4.14	-4.22	-4.32	-4.46	-4.63	-5.13
Peak EIRP (dBm)	-3.85	-3.81	-3.92	-4.00	-4.07	-4.14	-4.22	-4.32	-4.46	-4.63	-5.13
Directivity (dBi)	5.29	5.36	5.36	5.43	5.51	5.49	5.45	5.37	5.33	5.31	5.30

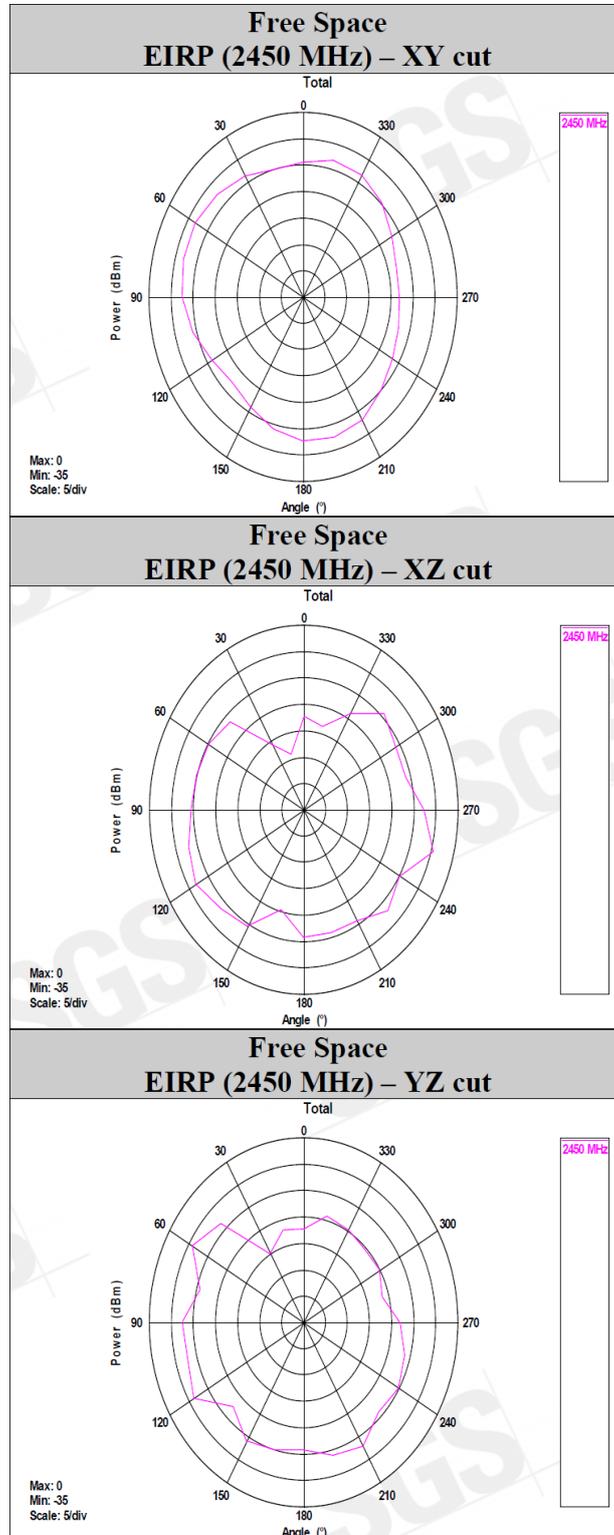


# 10. Reference Circuit

Module is pre-programmed with Raytac's AT command firmware. Default is "LDO mode" and is using internal 32.768khz RC oscillator.

### REMARK:

\*\* When using DC-DC mode, please add L2 / L3 / C14. \*\*

\*\* When **NOT** using internal 32.768khz RC oscillator, please add X2 / C12 / C13.

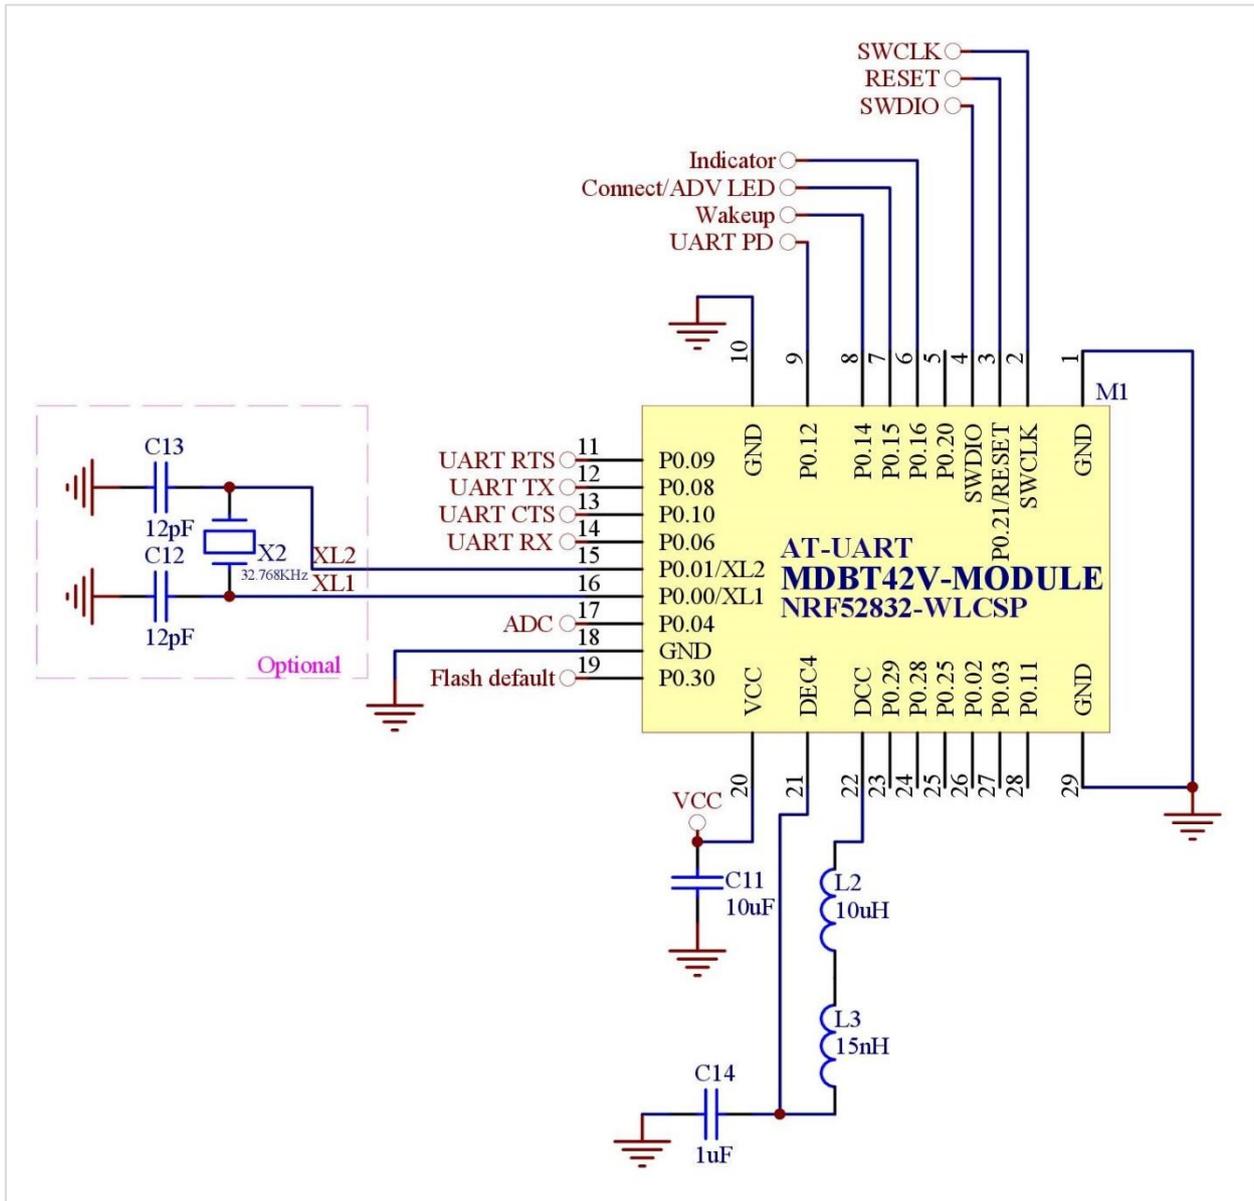

# 11. Certification

## 11.1. Declaration ID

### BT 5.1

Declaration ID	QDID(s)	Company	Specification Name
D047708	139361 - End Product	Raytac Corporation	5.1

### BT 5.2

Declaration ID	QDID(s)	Company	Specification Name
D053149	159932 - End Product	Raytac Corporation	5.2

## 11.2. FCC Certificate (USA)

		
<b>TCB</b>	<b>GRANT OF EQUIPMENT AUTHORIZATION</b> Certification Issued Under the Authority of the Federal Communications Commission By:	<b>TCB</b>
	Telefication B.V. Edisonstraat 12a Zevenaar, NL-6902 PK Netherlands	Date of Grant: 09/07/2017 Application Dated: 09/05/2017
<b>Raytac Corp.</b> 5F., No.3, Jiankang Rd., Zhonghe Dist., New Taipei City,, 23586 Taiwan		
<b>Attention: Venson Liao , R&amp;D Manager</b>		
<b>NOT TRANSFERABLE</b>		
EQUIPMENT AUTHORIZATION is hereby issued to the named GRANTEE, and is VALID ONLY for the equipment identified hereon for use under the Commission's Rules and Regulations listed below.		
<b>FCC IDENTIFIER:</b>	SH6MDBT42V	
<b>Name of Grantee:</b>	Raytac Corp.	
<b>Equipment Class:</b>	Digital Transmission System	
<b>Notes:</b>	BT 4.2 Module	
<b>Modular Type:</b>	Single Modular	
<b>Grant Notes</b>	FCC Rule Parts	Frequency Range (MHZ)
	15C	Output Watts
		2402.0 - 2480.0 0.0029
		Frequency Emission Tolerance Designator
<p>Modular Approval. Power output listed is conducted. This grant is valid only when the module is sold to OEM integrators and must be installed by the OEM or OEM integrators. The antennas used for this transmitter as shown in this filing must be installed to provide a separation distance of at least 5 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users may not be provided with the module installation instructions. OEM integrators and end-users must be provided with transmitter operating conditions for satisfying RF exposure compliance.</p>		
Certificate No.: 172181318/AA/00	George Lo Product Assessor	

## 11.3. TELEC Certificate (Japan)

telefication bv  
The Netherlands  
Chamber of Commerce  
51565536  
www.telefication.com



**Certificate**  
of  
Radio Equipment in JAPAN

No: 201-170920 / 00

Telefication, operating as Conformity Assessment Body (CAB ID Number: 201) with respect to Japan, declares that the listed product complies with the Technical Regulations Conformity Certification of Specified Radio equipment (ordinance of MPT N° 37,1981)

Product description: **BT 4.2 Module**  
Trademark: **Raytac**  
Type designation: **MDBT42V**  
Hardware / Software version: **1 / 1**  
Variants: **See Annex 3**

Manufacturer: **Raytac Corporation**  
Address: **5F, No. 3, Jiankang Rd., Zhonghe Dist.**  
City: **23586 New Taipei City**  
Country: **Taiwan**

This statement is granted to:

Name: **Raytac Corporation**  
Address: **5F, No. 3, Jiankang Rd., Zhonghe Dist.**  
City: **23586 New Taipei City**  
Country: **Taiwan**

This statement has **THREE** Annexes.

Zevenaar, 12 September 2017

**CAB**




Ramy Nabod  
Product Assessor



## 11.4. NCC Certificate (Taiwan)

### MDBT42V Series

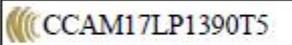	<b>台灣檢驗科技股份有限公司 電信管制射頻器材型式認證證明</b>
證照字號：型式字第 AM 號	
一、申請者：	勳達國際電子有限公司
二、地址：	臺北市大安區和平東路1段145號5樓之1
三、製造廠商：	勳達國際電子有限公司
四、器材名稱：	藍牙模組
五、廠牌：	Raytac
六、型號：	MDBT42V
七、發射功率(電場強度)：	詳細射頻規格如備註欄
八、工作頻率：	詳細射頻規格如備註欄
九、審驗日期：	106年09月12日(換證日期：110年02月08日)
十、審驗合格標籤式樣：	
	
十一、警語或標示要求：	(器材本體、使用手冊、外包裝盒等應遵守下列標示要求)
1.	應於本體明顯處標示審驗合格標籤或符合性聲明標籤及其型號，並於包裝盒標示主管機關印章。最終產品應於本體明顯處標示非隨插即用射頻模組(組件)之審驗合格標籤及最終產品型號，並於包裝盒標示主管機關印章，始得販賣。
2.	依主管機關或相關技術規範規定於指定位置標示正體中文警語。
3.	經授權使用射頻模組(組件)之審驗合格標籤者，應於最終產品說明書及包裝盒提供充分與正確之資訊。
4.	於網際網路販賣電信管制射頻器材者，應於該網際網路網頁標示其型號及審驗合格標籤或符合性聲明標籤資訊。但最終產品得僅標示其型號及其組裝之非隨插即用射頻模組(組件)之審驗合格標籤資訊。
5.	使用手冊應標示下列資訊： (1) 取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前述合法通信，指依電信管理法規作業之無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。
型式認證號碼：CCAM17LP1390T5	
第 1 頁，共 2 頁	
本證書與續頁分開使用無效	


## MDBT42V-P Series

**SGS**

台灣檢驗科技股份有限公司  
電信管制射頻器材型式認證證明

證照字號：型式字第 AM 號

- 一、申請者：勁達國際電子有限公司
- 二、地址：臺北市大安區和平東路1段145號5樓之1
- 三、製造廠商：勁達國際電子有限公司
- 四、器材名稱：藍牙模組
- 五、廠牌：Raytac
- 六、型號：MDBT42V-P
- 七、發射功率(電場強度)：詳細射頻規格如備註欄
- 八、工作頻率：詳細射頻規格如備註欄
- 九、審驗日期：106年09月12日(換證日期：110年02月08日)

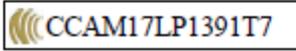- 十、審驗合格標籤式樣：



- 十一、警語或標示要求：(器材本體、使用手冊、外包裝盒等應遵守下列標示要求)
1. 應於本體明顯處標示審驗合格標籤或符合性聲明標籤及其型號，並於包裝盒標示主管機關標章。最終產品應於本體明顯處標示非隨插即用射頻模組(組件)之審驗合格標籤及最終產品型號，並於包裝盒標示主管機關標章，始得販賣。
  2. 依主管機關或相關技術規範規定於指定位置標示正體中文警語。
  3. 經授權使用射頻模組(組件)之審驗合格標籤者，應於最終產品說明書及包裝盒提供充分與正確之資訊。
  4. 於網際網路販賣電信管制射頻器材者，應於該網際網路網頁標示其型號及審驗合格標籤或符合性聲明標籤資訊。但最終產品得僅標示其型號及其組裝之非隨插即用射頻模組(組件)之審驗合格標籤資訊。
  5. 使用手冊應標示下列資訊：
    - (1) 取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前述合法通信，指依電信管理法規定作業之無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

## 11.5. CE Test Report (EU)

	Report No.: E2/2017/80017-01 Page: 1 of 58
 <b>RED (2014/53/EU)</b> <b>ETSI EN 300 328 V2.2.2 : 2019</b> <b>TEST REPORT</b>	
<b>FOR</b>	
<b>Applicant:</b>	Raytac Corporation 5F, No.3, Jiankang Rd., Zhonghe Dist., New Taipei City , 23586, Taiwan
<b>Product Name:</b>	BLE Module
<b>Brand Name:</b>	Raytac
<b>Model No.:</b>	MDBT42V, MDBT42V-P
<b>Model Difference:</b>	MDBT42V with chip antenna; MDBT42V-P with PCB antenna
<b>Report Number:</b>	E2/2017/80017-01
<b>Issue Date:</b>	May 20, 2020
<b>Date of Test:</b>	Aug. 01, 2017 ~ Aug. 24, 2017 (Original) Apr. 16, 2020 ~ May 11, 2020 (Updated)
<b>Date of EUT Received:</b>	Aug. 01, 2017 (Original) Apr. 16, 2020 (Updated)
<b>We hereby certify that:</b>	The above equipment was tested by SGS Taiwan Ltd., Electronics & Communication Laboratory for compliance with the requirements set forth in the European Standard ETSI EN 300 328 V2.2.2:2019 under RED 2014/53/EU. The results of testing in this report apply to the product system that was tested only. Other similar equipment will not necessarily produce the same results due to production tolerance and measurement uncertainties.
<b>Approved By:</b>	 <u>CHUN-CHIEH, CHEN / Supervisor</u>
	 



SGS Reference No: E1/2017/80007C

## VERIFICATION OF EMC COMPLIANCE

Verification No. : E1/2017/80007C  
Representative Model No. : MDBT42V  
Added Model(s) : MDBT42V-P  
Product Name : BT 4.2 Module  
Brand Name : Raytac  
Applicant : Raytac Corporation  
Address of Applicant : 5F, No.3, Jiankang Rd., Zhonghe Dist., New Taipei City , 23586, Taiwan  
Test Report Number : E1/2017/80007  
Date of Issue : Sep. 04, 2017  
Applicable Standards : EN 301 489 -1 v2.2.0: 2017-03 (Draft)  
EN 301 489 -17 v3.2.0: 2017-03 (Draft)  
EN 55032 : 2015+AC:2016-07  
EN 61000-4-2 : 2009, EN 61000-4-3 : 2006+A1:2008+A2:2010

### Conclusion

The apparatus meets the requirements of the above standards and hence compliance the essential requirements under article 3.1b of the RED (2014/53/EU) Directive.

\*This verification is only valid for the equipment and configuration described, and in conjunction with the test report as detailed above.

Authorized Signatory:

SGS TAIWAN LTD.  
Eddy Cheng  
Technical Asst. Supervisor

## 11.6. IC Certificate (Canada)

<b>telefication bv</b> The Netherlands Chamber of Commerce 51565536 www.telefication.com		 <b>telefication</b>	
<b>TECHNICAL ACCEPTANCE CERTIFICATE</b>		<b>CERTIFICAT D'ACCEPTABILITÉ TECHNIQUE</b>	
CERTIFICATION No. No. DE CERTIFICATION	8017A-MDBT42V		
TELEFICATION No. No. DE TELEFICATION	172170518/AA/00		
TEST SITE No. No. DE LABORATOIRE	4620A-5		
ISSUED TO DÉLIVRÉ À	Raytac Corporation		
TYPE OF EQUIPMENT GENRE DE MATÉRIEL	Bluetooth device		
TRADE NAME AND MODEL MARQUE ET MODELE	Raytac / MDBT42V Raytac / MDBT42V-P		
CERTIFIED TO CERTIFIÉ SELON LE	SPECIFICATION CAHIER DES CHARGES	RSS-102 RSS-247	ISSUE EDITION
			5 2
<p>Certification of equipment means only that the equipment has met the requirements of the above-noted specification. Licence applications, where applicable to use certified equipment, are acted on accordingly by the ISED issuing office and will depend on the existing radio environment, service and location of operation. This certificate is issued on condition that the holder complies and will continue to comply with the requirements and procedures issued by ISED. The equipment for which this certificate is issued shall not be manufactured, imported, distributed, leased, offered for sale or sold unless the equipment complies with the applicable technical specifications and procedures issued by ISED.</p>		<p>La certification du matériel signifie seulement que le matériel a satisfait aux exigences de la norme indiquée ci-dessus. Les demandes de licences nécessaires pour l'utilisation du matériel certifié sont traitées en conséquence par le bureau de délivrance d'ISDE et dépendent des conditions radio ambiantes, du service et de l'emplacement d'exploitation. Le présent certificat est délivré à la condition que le titulaire satisfasse et continue de satisfaire aux exigences et aux procédures d'ISDE. Le matériel à l'égard duquel le présent certificat est délivré ne doit pas être fabriqué, importé, distribué, loué, mis en vente ou vendu à moins d'être conforme aux procédures et aux spécifications techniques applicables publiées par ISDE.</p>	
ISSUED BY TELEFICATION BV (NL0001), RECOGNIZED CERTIFICATION BODY BY INNOVATION, SCIENCE AND ECONOMIC DEVELOPMENT CANADA DÉLIVRÉ PAR TELEFICATION BV (NL0001), ORGANISME DE CERTIFICATION RECONNU PAR INNOVATION, SCIENCES ET DÉVELOPPEMENT ÉCONOMIQUE CANADA			
<p><i>I hereby attest that the subject equipment was tested and found in compliance with the above-noted specification. J'atteste, par la présente, que le matériel a fait l'objet d'essai et a été jugé conforme à la spécification ci-dessus</i></p>			
DATE 07 Sep 2017 BY	George Lo Product Assessor		
This certificate has one annex.			
			

## 11.7. SRRC Certificate (China)

**无线电发射设备**  
**Radio Transmission Equipment**  
**型号核准证**  
**Type Approval Certificate**

劲达国际电子有限公司(台湾) :

**根据《中华人民共和国无线电管理条例》**  
**In accordance with the provisions on the Radio**  
**Regulations of the People's Republic of China , the following**  
**符合中华人民共和国无线电管理规定和**  
**radio transmission equipment , after examination , conforms**  
**技术标准，其核准代码为：** CMIIT ID: 2017DJ5872  
**to the provisions with its CMIIT ID:**

有效期： 2025-09-14  
Validity

  
(发证机关)  
Sealed by issuing authority

2022 09月 02日  
Year Month Date

## 11.8. KC Certificate

E6D1-6EEE-953F-AC29

<b>방송통신기자재등의 적합인증서</b> <i>Certificate of Broadcasting and Communication Equipments</i>	
상호 또는 성명 <i>Trade Name or Applicant</i>	Raytac Corporation
기자재명칭(명칭) <i>Equipment Name</i>	특정소출력 무선기기(무선데이터통신시스템용 무선기기)
기본모델명 <i>Basic Model Number</i>	MDBT42V
파생모델명 <i>Series Model Number</i>	MDBT42V-P
인증번호 <i>Certification No.</i>	R-C-ryt-MDBT42V
제조사/제조국가 <i>Manufacturer/ Country of Origin</i>	Raytac Corporation / 대한민국
인증연월일 <i>Date of Certification</i>	2020-09-14
기타 <i>Others</i>	
<p>위 기자재는 「전파법」 제58조의2 제2항에 따라 인증되었음을 증명합니다.                      It is verified that foregoing equipment has been certificated under the Clause 2, Article 58-2 of Radio Waves Act.</p> <p style="text-align: right;">2020년(Year) 09월(Month) 14일(Day)</p> <p style="text-align: center;">                         국립전파연구원장   <i>Director General of National Radio Research Agency</i> </p> <p style="text-align: center; font-size: small;">                         ※ 인증 받은 방송통신기자재는 반드시 "적합성평가표시" 를 부착하여 유통하여야 합니다.                          위반시 과태료 처분 및 인증이 취소될 수 있습니다.                     </p>	

## 11.9. RoHS & REACH Report

Please visit "[Support](#)" page of our website to download.

## 11.10. End-Product Label

It is suggested using following content adding to package or user manual or label to obey the regulation. Any rules of end-product label shall refer to each certification for final reference.

### 11.10.1. FCC (USA)

The FCC statement should be included in the user manual when there is no enough space on label. Otherwise, it should be included on the label.

“This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions. (1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation.”

The final end product must be labeled in a visible area with the following: “Contain FCC ID: SH6MDBT42V”.

### 11.10.2. TELEC (Japan)

When manufacturer is placing the product on the Japanese market, the product must be affixed with the following Specified Radio Equipment marking:



### 11.10.3. NCC (Taiwan)

請依下列標籤式樣自製標籤，標貼或印鑄於器材本體明顯處，始得販賣或公開陳列。

Series	標籤樣式
MDBT42V Series	
MDBT42V- <b>P</b> Series	

以 MDBT42V 為例，平台廠商必須於平台上標示字樣「本產品內含射頻模組：ID 編號 CCAM17LP1390T5」。

「平台」定義如下：若器材組裝本案模組，消費者仍能正常使用該器材主要功能，該器材得視為平台。若器材不組裝本案模組，消費者不能正常使用該器材主要功能，該器材不能視為平台。該類不同廠牌型號器材組裝本案審驗模組後，須分別申請型式認證。

## 11.10.4. IC (Canada)

The IC statement should be included in the user manual when there is no enough space on label. Otherwise, it should be included on the label.

“This device complies with Industry Canada license-exempt RSS Standard(s). Operation is subject to the following two conditions. (1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.”

The final end product must be labeled in a visible area with the following: “Contain IC ID: 8017A-MDBT42V”.

## 12. Notes and Cautions

Module is not designed to last for a lifetime. Like general products, it is expected to be worn out after continuous usage through the years. To assure that product will perform better and last longer, please make sure you:

- Follow the guidelines of this document while designing circuit/end-product. Any discrepancy of core Bluetooth technology and technical specification of IC should refer to definition of Bluetooth Organization and Nordic Semiconductor as final reference.
- Do not supply voltage that is not within range of specification.
- Eliminate static electricity at any cost when working with the module as it may cause damage. It is highly recommended adding anti-ESD components to circuit design to prevent damage from real-life ESD events. Anti-ESD methods can be also applied in mechanical design.
- Do not expose modules under direct sunlight for long duration. Modules should be kept away from humid and salty air conditions, and any corrosive gasses or substances. Store it within  $-40^{\circ}\text{C}$  to  $+125^{\circ}\text{C}$  before and after installation.
- Avoid any physical shock, intense stress to the module or its surface.
- Do not wash the module. No-Clean Paste is used in production. Washing it will oxidize the metal shield and have chemistry reaction with No-Clean Paste. Functions of the module are not guaranteed if it has been washed.

The module is not suitable for life support device or system and not allowed to be used in destructive device or systems in any direct or indirect ways. The customer agrees to indemnify Raytac for any losses when applying modules in applications such as the ones described above.

# 13. Basic Facts for nRF52 Chip

Below chart shows basic spec for Nordic nRF52 family, which is helpful to understand the differences between each SoC. Any discrepancy shall refer to Nordic’s technical document as final reference.

See [Full List of Raytac’s BLE Modules](#) for complete model no. of each item.

Nordic Solution	nRF52840	nRF52833	nRF52820	nRF52832	nRF52810	nRF52811	nRF52805
RAYTAC Model No. (MDBTXX)	50Q series	50Q series 50 series	50 series	42Q series 42 series 42V series	42Q series	42Q Series	42T series 42TV series
Bluetooth Direction Finding		V	V			V	
Bluetooth 5 Long Range (125kbps)	V	V	V			V	
Bluetooth 5 High Speed	V	V	V	V	V	V	V
Bluetooth 5 Ad. Extention (x8)	V	V	V	V	V	V	V
Flash (kBytes)	1024	512	256	512	192	192	192
RAM (kBytes)	256	128	32	64	24	24	24
ANT Plus	V	V	V	V	V	V	
IEEE 802.15.4	V	V	V			V	
ARM® TrustZone® Cryptocell	V						
USB	V	V	V				
QSPI	V						
NFC	V	V		V			
I2S	V	V		V			
SPI, TWI, UART, PWM	V	V	V	V	V	V	without PWM
PDM	V	V		V	V	V	
ADC, Comparators	V	V	without ADC	V	V	V	without comparators
Supply Range (V)	1.7 to 5.5	1.7 to 5.5	1.7 to 5.5	1.7 to 3.6	1.7 to 3.6	1.7 to 3.6	1.7 to 3.6

## 14. Useful Links

- **Nordic Infocenter:** <https://infocenter.nordicsemi.com/index.jsp>  
All the necessary technical files and software development kits of Nordic's chip are on this website.
- **Nordic Developer Zone:** <https://devzone.nordicsemi.com/questions/>  
A highly recommended website for firmware developer. Interact with other developers and Nordic's employees will help with your questions. The site also includes tutorials in detail to help you get started.
- **Official Page of nRF52832 :**  
<https://www.nordicsemi.com/eng/Products/Bluetooth-low-energy/nRF52832>  
A brief introduction to nRF52832 and download links for Nordic's developing software and SoftDevices.

# History of Firmware Revision

FW Ver.	Compatible HW Build	Release Date	Description of Revision	Note
1.0		2018/07/02	1 <sup>st</sup> release.	99-52832-10A
1.1		2018/10/17	<ol style="list-style-type: none"> <li>1. Improved power consumption.</li> <li>2. UI Changes: <ul style="list-style-type: none"> <li>- Add "AT+SLEEP" to sleep in connected state</li> </ul> </li> <li>3. Add new AT commands <ul style="list-style-type: none"> <li>- AT+CONNECTINTERVALMODE2</li> <li>- AT+CONNECTINTERVALTIMEttttttt</li> <li>- AT?CONNECTINTERVALTIME</li> <li>- AT+SETGPIOnnHIGH</li> <li>- AT+SETGPIOnnLOW</li> <li>- AT+SETGPIOnnOFF</li> </ul> </li> <li>4. Modify detection for ADC value.</li> <li>5. Add function of setting MAC address by the user.</li> </ol>	99-52832-10B
1.2		2020/04/09	<ol style="list-style-type: none"> <li>1. Fixed issues of reading MAC address.</li> <li>2. Added an update process on DLE after connection.</li> </ol>	99-52832-10C

# Full List of Raytac's BLE Modules

## ● MDBT40 Series

Series	Nordic Solution	Raytac No.	IC Ver.	Antenna	RAM	Flash Memory
MDBT40	nRF51822	MDBT40-256V3	3	Chip Antenna	16 kb	256 K
		MDBT40-256RV3			32 kb	256 K
MDBT40-P	nRF51822	MDBT40-P256V3	3	PCB Antenna	16 kb	256 K
		MDBT40-P256RV3			32 kb	256 K

## ● MDBT42Q Series (QFN Package IC)

Series	Nordic Solution	Raytac No.	IC Ver.	Antenna	RAM	Flash Memory
MDBT42Q	nRF52832	MDBT42Q-512KV2	2	Chip Antenna	64 kb	512 K
	nRF52810	MDBT42Q-192KV2	2		24 kb	192 K
	nRF52811	MDBT42Q-192KL	1			
MDBT42Q-P	nRF52832	MDBT42Q-P512KV2	2	PCB Antenna	64 kb	512 K
	nRF52810	MDBT42Q-P192KV2	2		24 kb	192 K
	nRF52811	MDBT42Q-P192KL	1			
MDBT42Q-U	nRF52832	MDBT42Q-U512KV2	2	u.FL Connector	64 kb	512 K

## ● MDBT42 Series (WLCSP Package IC)

Series	Nordic Solution	Raytac No.	IC Ver.	Antenna	RAM	Flash Memory
MDBT42	nRF52832	MDBT42-512KV2	2	Chip Antenna	64 kb	512 K
MDBT42-P		MDBT42-P512KV2		PCB Antenna		

## ● MDBT42V Series (WLCSP Package IC)

Series	Nordic Solution	Raytac No.	IC Ver.	Antenna	RAM	Flash Memory
MDBT42V	nRF52832	MDBT42V-512KV2	2	Chip Antenna	64 kb	512 K
MDBT42V-P		MDBT42V-P512KV2		PCB Antenna		

## ● MDBT42T Series (WLCSP Package IC)

Series	Nordic Solution	Raytac No.	IC Ver.	Antenna	RAM	Flash Memory
MDBT42T	nRF52805	MDBT42T-192K	1	Chip Antenna	24 kb	192 K
MDBT42T-P		MDBT42T-P192K		PCB Antenna		

## ● MDBT42TV Series (WLCSP Package IC)

Series	Nordic Solution	Raytac No.	IC Ver.	Antenna	RAM	Flash Memory
MDBT42TV	nRF52805	MDBT42TV-192K	1	Chip Antenna	24 kb	192 K
MDBT42TV-P		MDBT42TV-P192K		PCB Antenna		

## ● MDBT50Q Series (aQFN Package IC)

Series	Nordic Solution	Raytac No.	IC Ver.	Antenna	RAM	Flash Memory
MDBT50Q	nRF52840	MDBT50Q-1MV2	2	Chip Antenna	256 kb	1 MB
	nRF52833	MDBT50Q-512K	1		128 kb	512 kb
MDBT50Q-P	nRF52840	MDBT50Q-P1MV2	2	PCB Antenna	256 kb	1 MB
	nRF52833	MDBT50Q-P512K	1		128 kb	512 kb
MDBT50Q-U	nRF52840	MDBT50Q-U1MV2	2	u.FL Connector	256 kb	1 MB
	nRF52833	MDBT50Q-U512K	1		128 kb	512 kb
Dongle	nRF52840	MDBT50Q-RX	1, 2	PCB Antenna	256 kb	1 MB

## ● MDBT50 Series (QFN Package IC)

Series	Nordic Solution	Raytac No.	IC Ver.	Antenna	RAM	Flash Memory
MDBT50	nRF52820	MDBT50-256R	1	Chip Antenna	32 kb	256 kb
	nRF52833	MDBT50-512K	1		128 kb	512 kb
MDBT50-P	nRF52820	MDBT50-P256R	1	PCB Antenna	32 kb	256 kb
	nRF52833	MDBT50-P512K	1		128 kb	512 kb

## ● MDBT53 Series (WLCSP Package IC)

Series	Nordic Solution	Raytac No.	IC Ver.	Antenna	RAM	Flash Memory
MDBT53	nRF5340	MDBT53-1M	1	Chip Antenna	512 kb	1 MB
MDBT53-P	nRF5340	MDBT53-P1M	1	PCB Antenna	512 kb	1 MB
MDBT53-U	nRF5340	MDBT53-U1M	1	u.FL Connector	512 kb	1 MB

## ● MDBT53V Series (WLCSP Package IC)

Series	Nordic Solution	Raytac No.	IC Ver.	Antenna	RAM	Flash Memory
MDBT53V	nRF5340	MDBT53V-1M	1	Chip Antenna	512 kb	1 MB
MDBT53V-P	nRF5340	MDBT53V-P1M	1	PCB Antenna	512 kb	1 MB

# Release Note

- 2018/07/02 Version A: 1<sup>st</sup> release
- 2018/08/15 Version B
  - (1) Revised typo of model no. on the first page.
  - (2) Added Chapter 5: Product Dimension, “no washing” note in Chapter 11.
  - (3) Updated link for RoHS & REACH.
- 2018/11/02 Version C
  - (1) See [History of Firmware Revision](#) for FW revision 1.1.
- 2020/04/09 Version D
  - (1) See [History of Firmware Revision](#) for FW revision 1.2.
  - (2) Updated the tray info in section 7.2.
  - (3) Added section 9: Antenna.
  - (4) Added MDBT50-256R & MDBT50-P256R (nRF52820 module) in the list of Raytac BLE module.
- 2020/06/09 Version E
  - (1) Refined description in section 3.
  - (2) Added tolerance of size info in section 5.
  - (3) Updated module photo and info of dot marking in section 7.
  - (4) Updated CE EN300 328 v.2.2.2 in section 11.
  - (5) Added nRF52820 in section 13.
- 2021/01/08 Version F
  - (1) Added information T&R, order code and label contexts in Chapter 4: Shipment Packaging Information
  - (2) Added BT 5.2 SIG approval & KC Certificate in Chapter 9: Certification.
  - (3) Updated table in Chapter 11: Basic Facts for nRF52 Family.
  - (4) Updated Full List of Raytac’s BLE Modules.

- 2021/02/19 Version G
  - (1) Updated data of throughput test in section 2 of Chapter 4: Test Report.
  - (2) Updated NCC certificate in Chapter 9: Certification.
  
- 2021/07/16 Version H
  - (1) Added information of current consumption in sleep mode in Chapter 4: Current Test.
  - (2) Updated graph in section 2 of Chapter 5: Product Dimension.
  - (3) Updated information of tray packaging in Chapter 7: Shipment Packaging Information.
  - (4) Refined description of default in Chapter 10: Reference Circuit.
  
- 2022/12/20 Version I
  - (1) Updated PCB Pin Indication picture in Chapter 5: Product Dimension.
  - (2) Updated SRRC certificate.
  - (3) Updated Chapter 7: 7.2.2 Tape & Reel Packaging info.
  - (4) Updated Chapter 5: 5.3 RF Layout Suggestion (aka Keep-Out Area).
  - (5) Updated Full List of Raytac's BLE modules.
  - (6) Updated Chapter 8: Specification corresponding to Nordic's new nRF52832 Product Specification V1.8.
  
- 2023/07/12 Version J
  - (1) Updated drawing in Chapter 5 for a better understanding of PCB measurement & RF Layout Suggestion.